
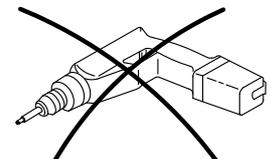
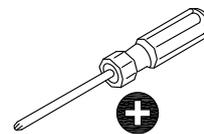
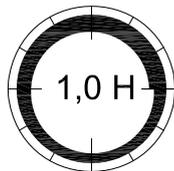
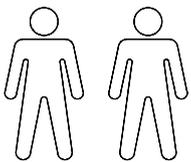


# ASSEMBLY INSTRUCTIONS


## JULIETTE KING FULL BED

Please read instructions carefully. Remove all wrapping material and packing from the carton. See hardware and furniture parts list for guidance. Be sure you have all parts before you start to assemble the product. Place all furniture parts on a clean surface, such as carpet or rug to prevent the item from being scratched.

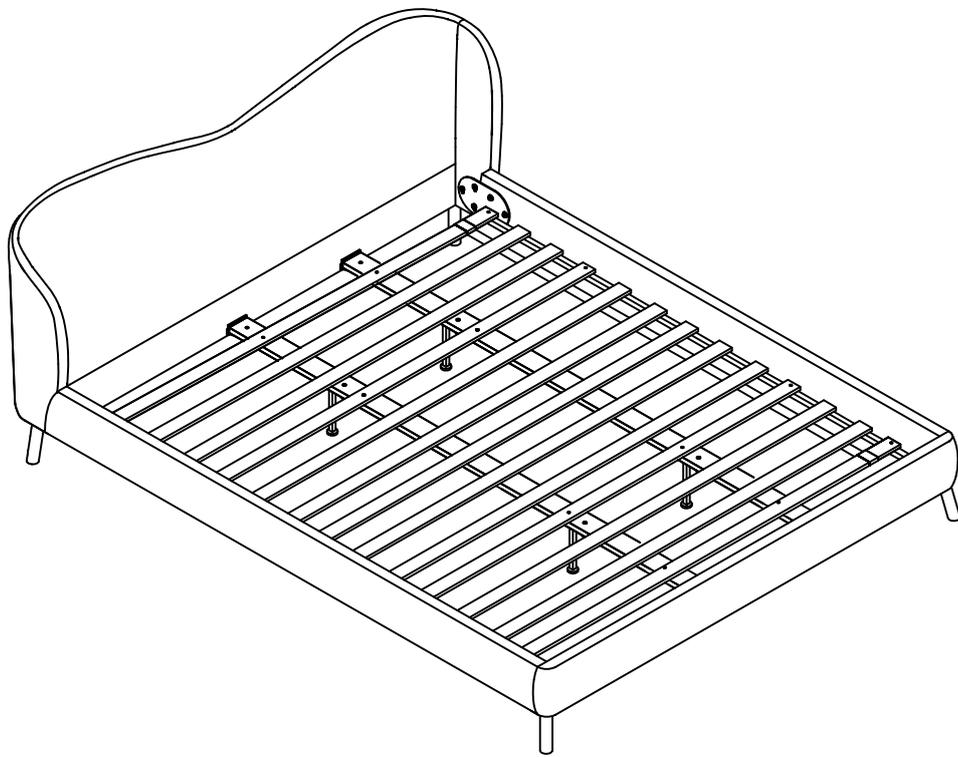

Part list:

1 x Part 1

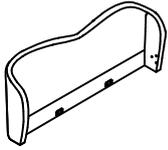

Headboard

1 x Part 2



Side rail left

1 x Part 3



Side rail right

1 x Part 4



Footboard

1 x Part 5



Slats

2 x Part 6



Middle support

4 x Part 7



Leg

4 x Part 8



Support leg

Hardware list:

Ax28



Bolt  
M8x25

Bx8



Bolt  
M8x35

Cx4



Bolt  
M6x15

Dx16




Screw  
Ø5x25

Ex8



Nut  
M8/13

Fx34



Washer  
Ø8/Ø19

Gx26




Spring washer  
Ø8/Ø13

Hx1



Allen key  
5mm

Jx4



Bracket  
68x32x30

Kx2



Connecting plate  
204x120x3

Lx4



Felt  
Ø20x3

Mx1




Spanner  
13




Nx2







Bracket  
130x47x47

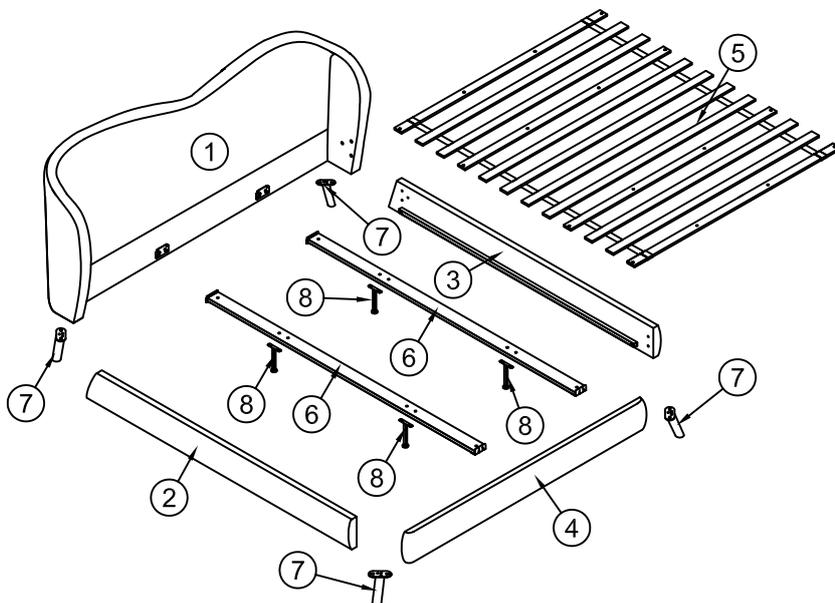





Ax4  M8x25mm	Hx1  5mm
---	---


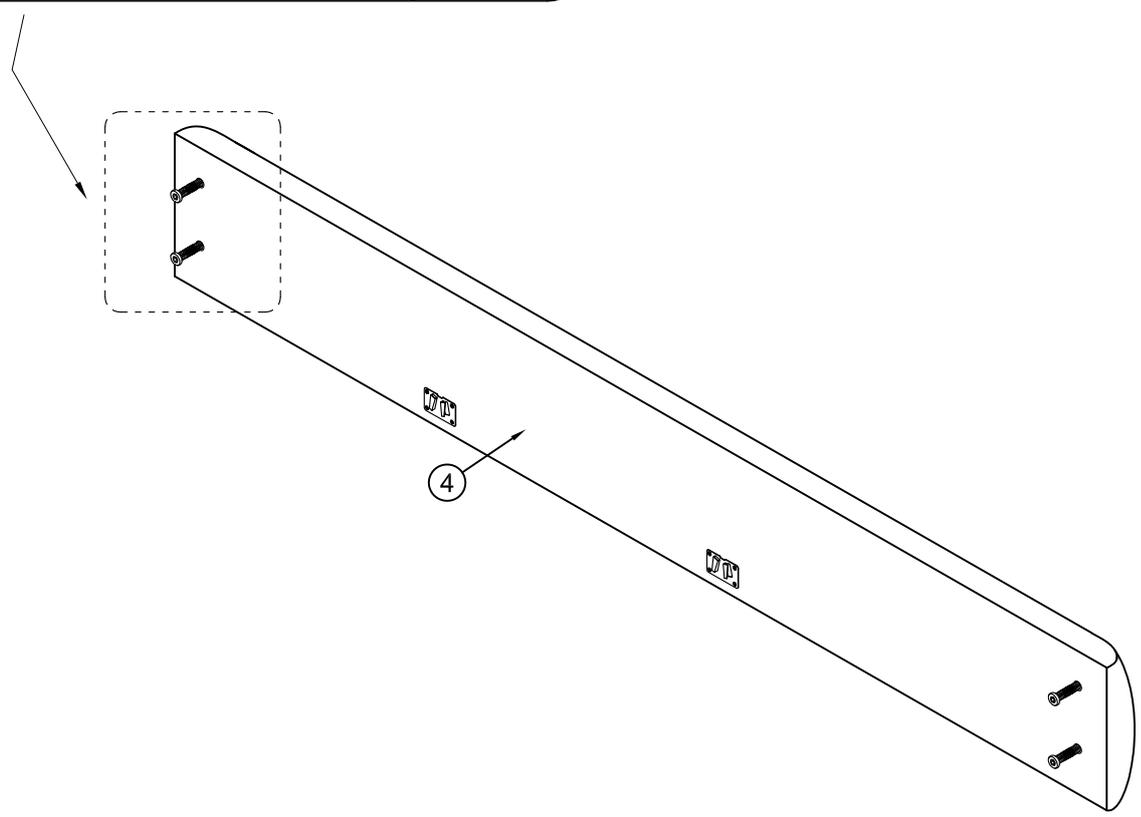
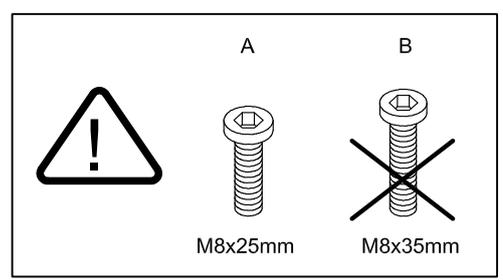
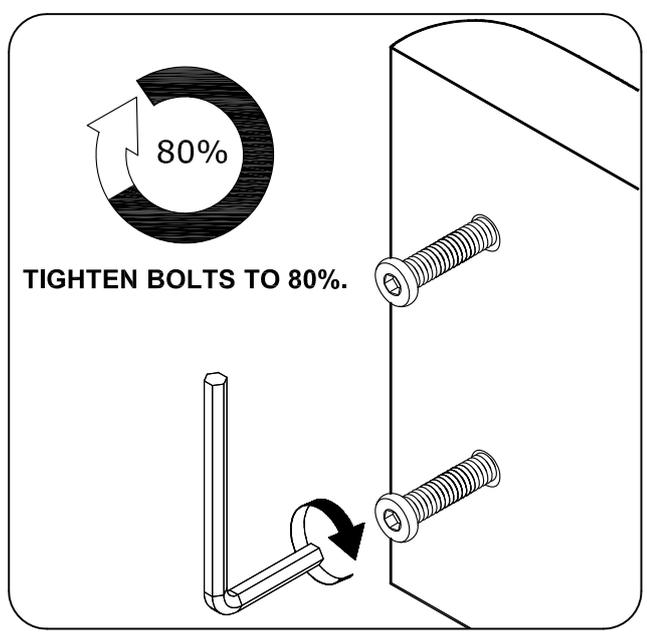


Ax6  M8x25mm	Fx6  Ø8/Ø19mm	Gx6  Ø8/Ø13mm	Hx1  5mm	Kx2  204x120x3mm
---	--	--	---	---

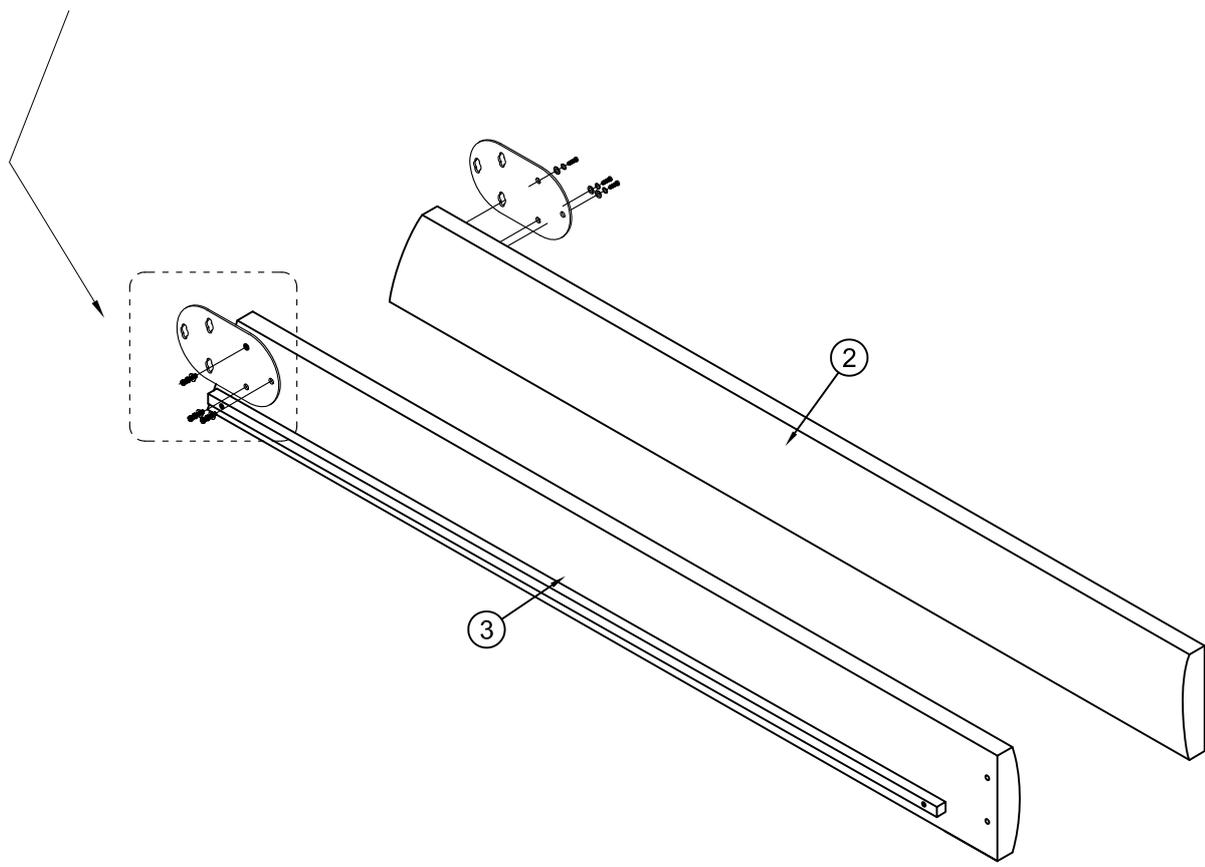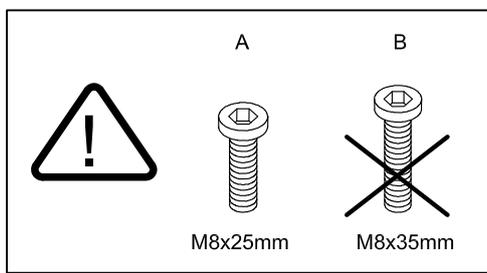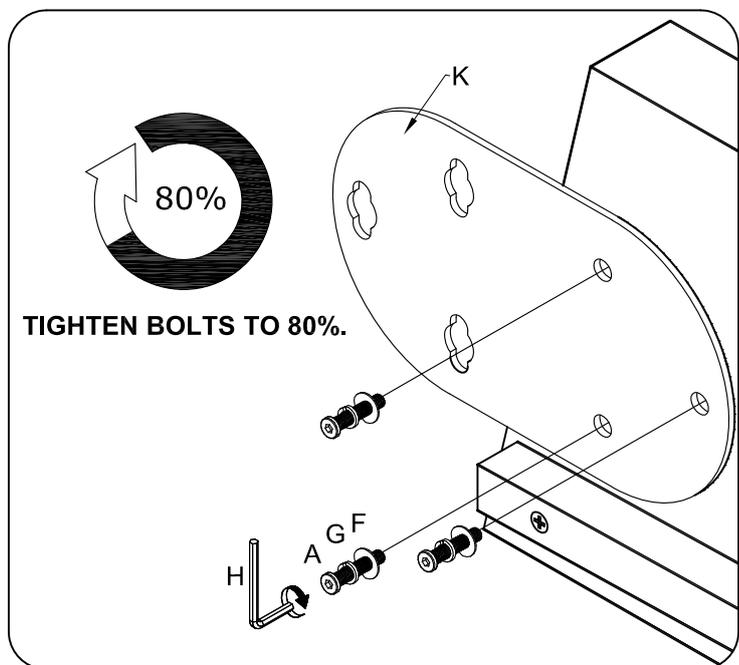

Ax4  M8x25mm	Fx4  Ø8/Ø19mm	Gx4  Ø8/Ø13mm	Hx1  5mm	Nx2  130x47x47mm
---	--	--	---	---

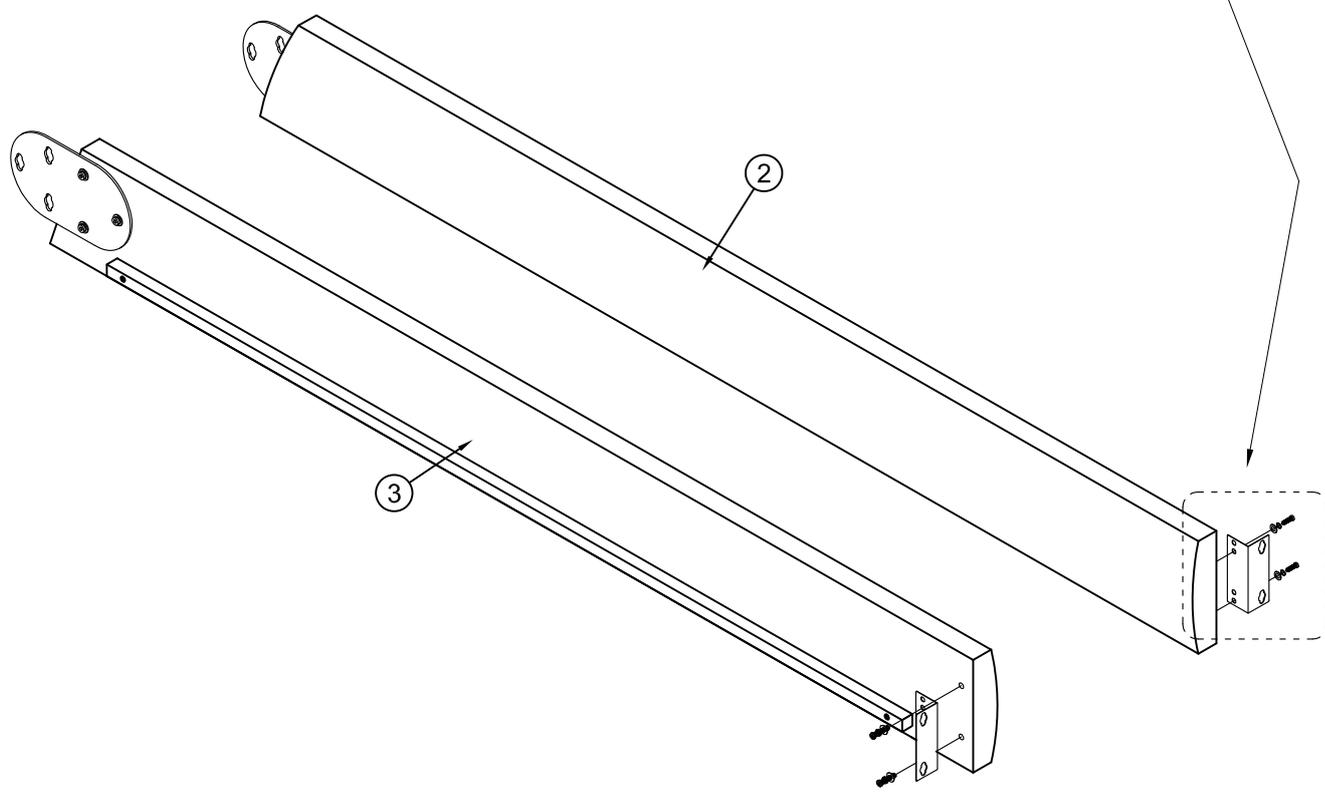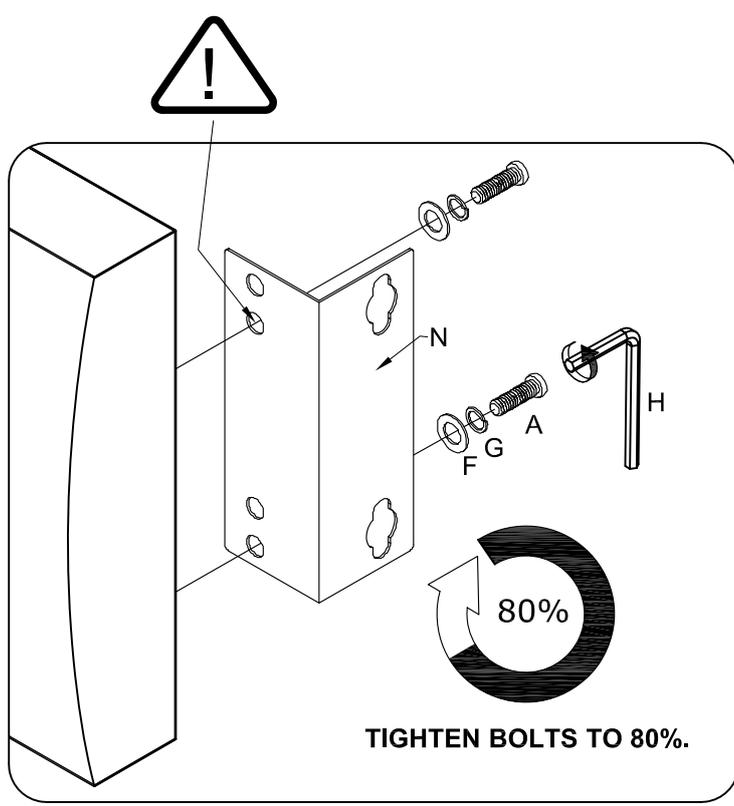
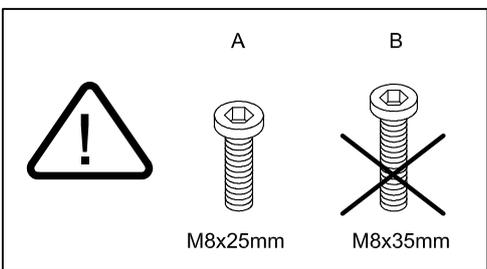


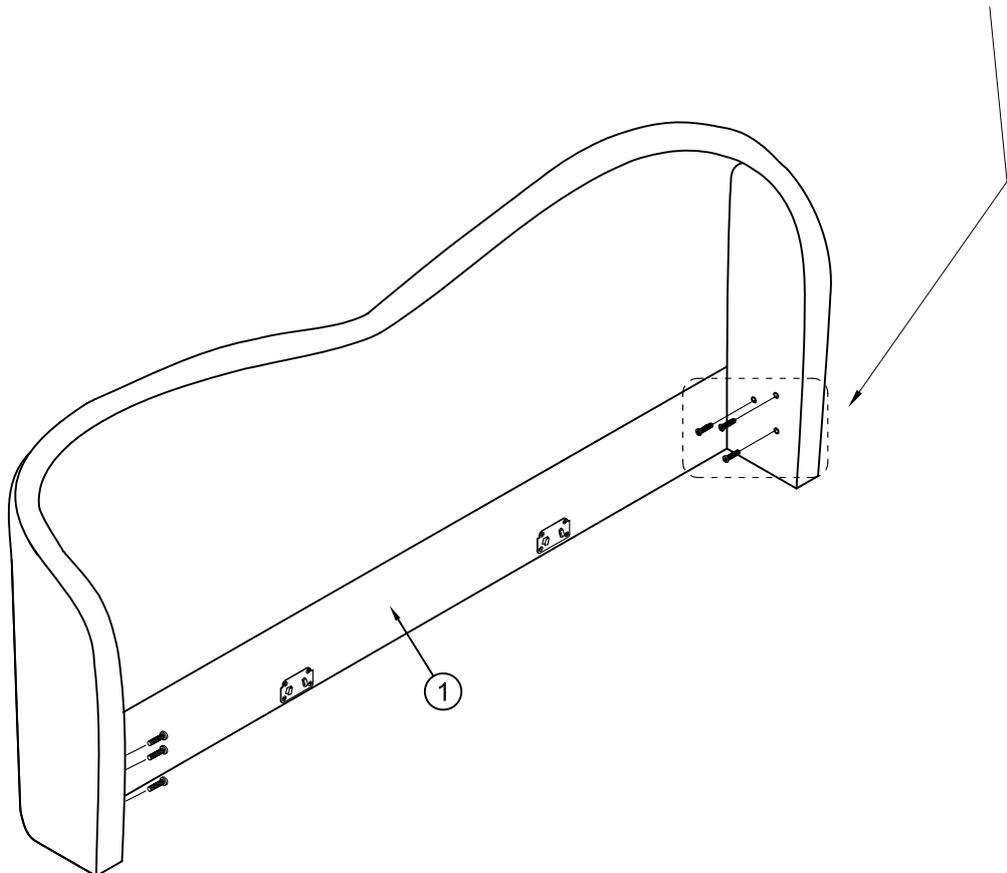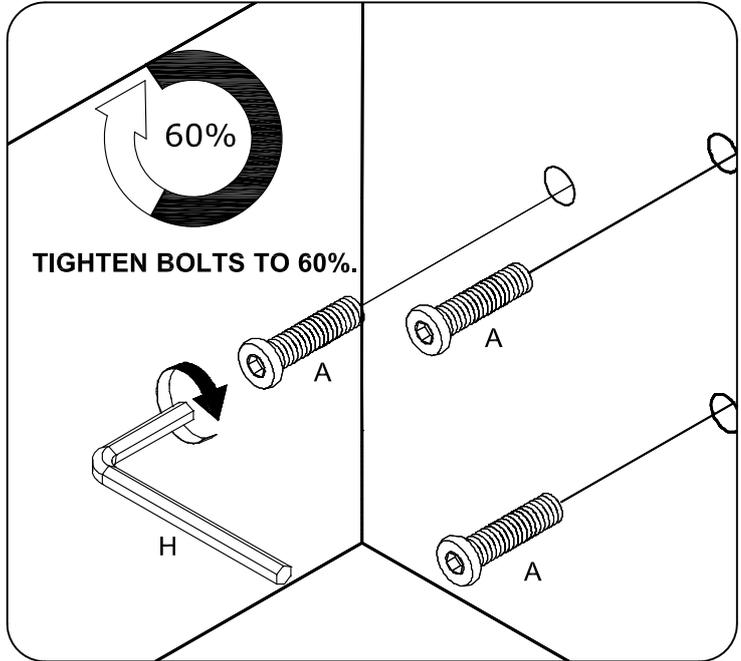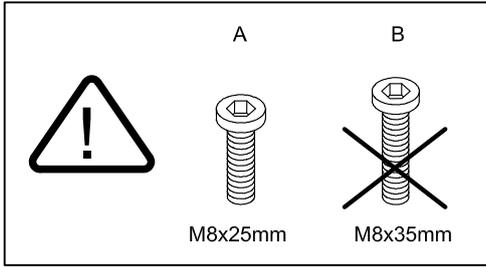
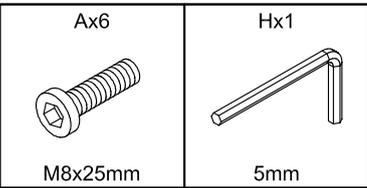




Hx1






5mm

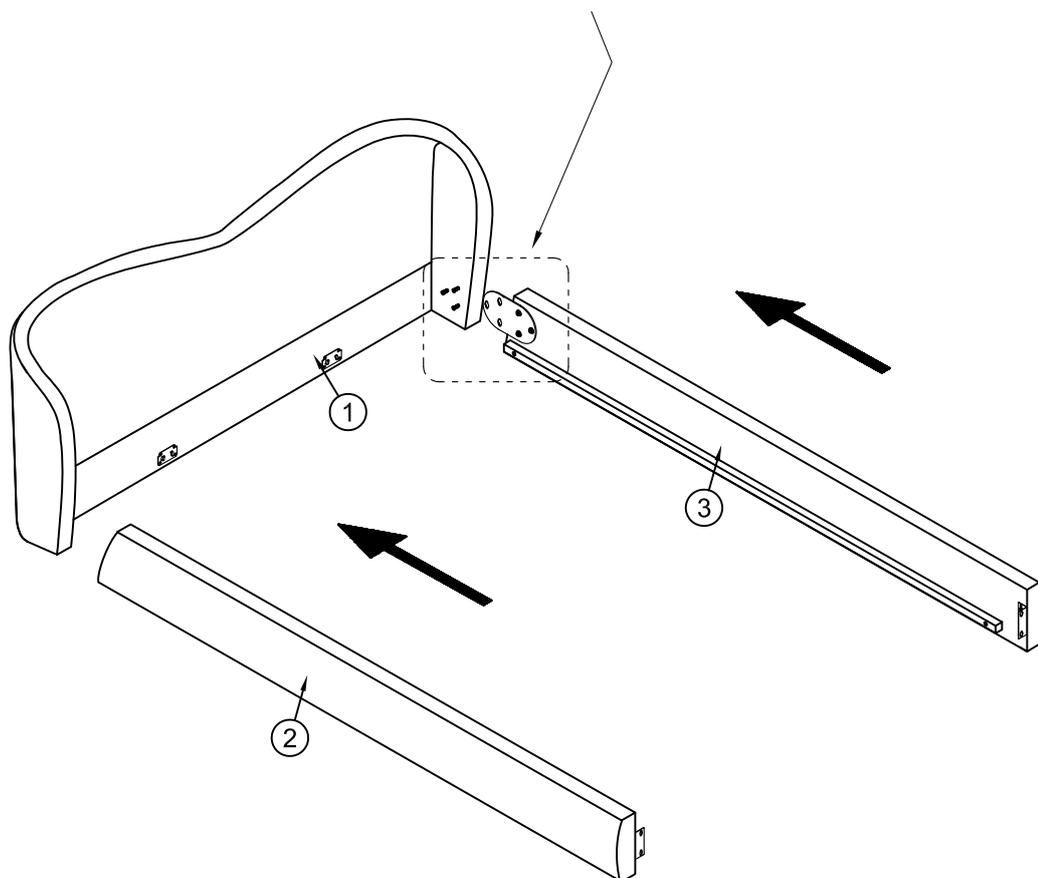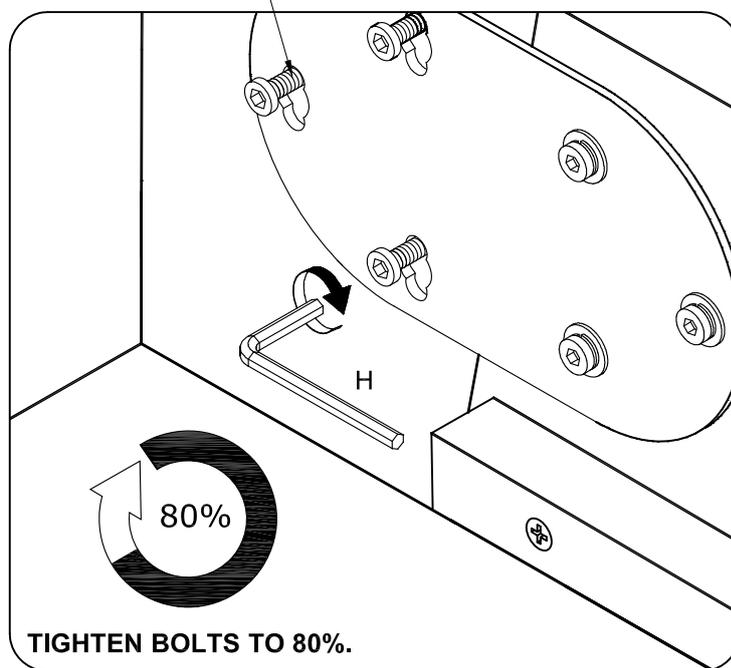

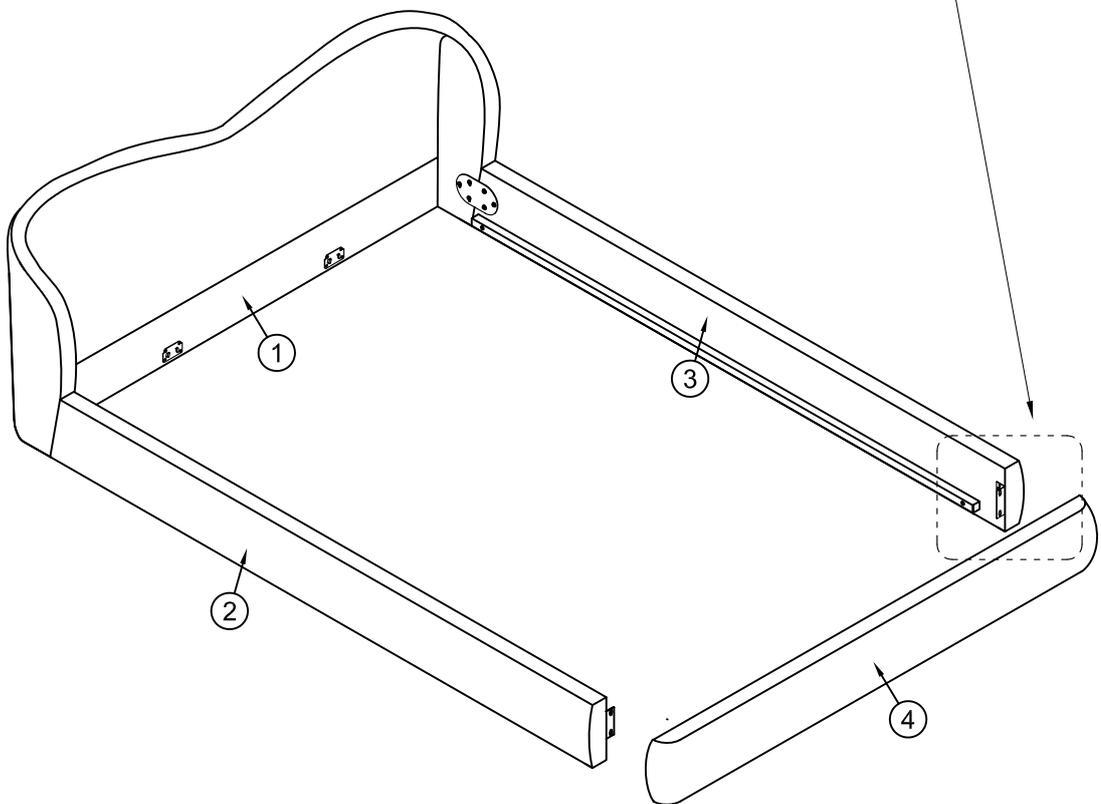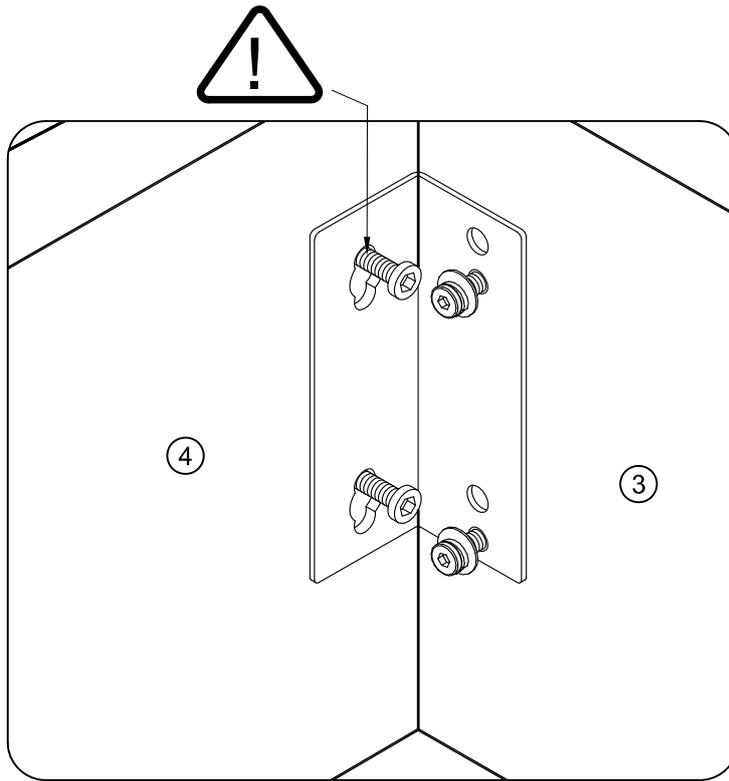

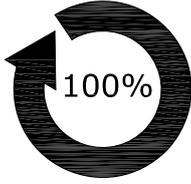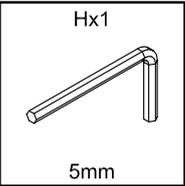

**NOW TIGHTEN BOLTS TO 100%**

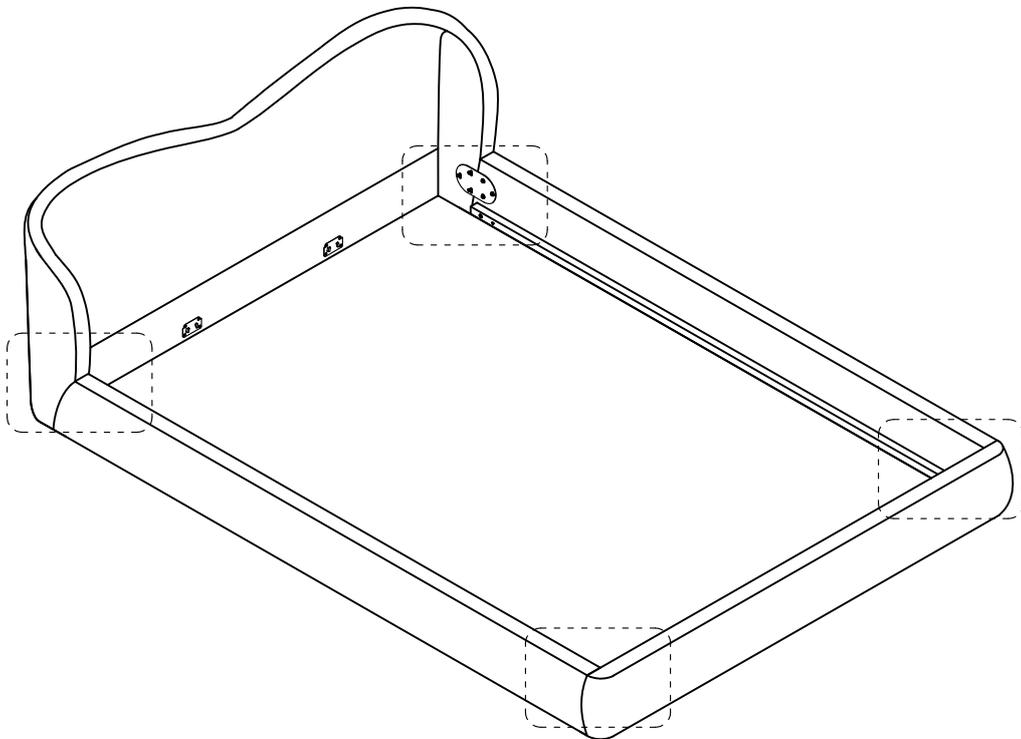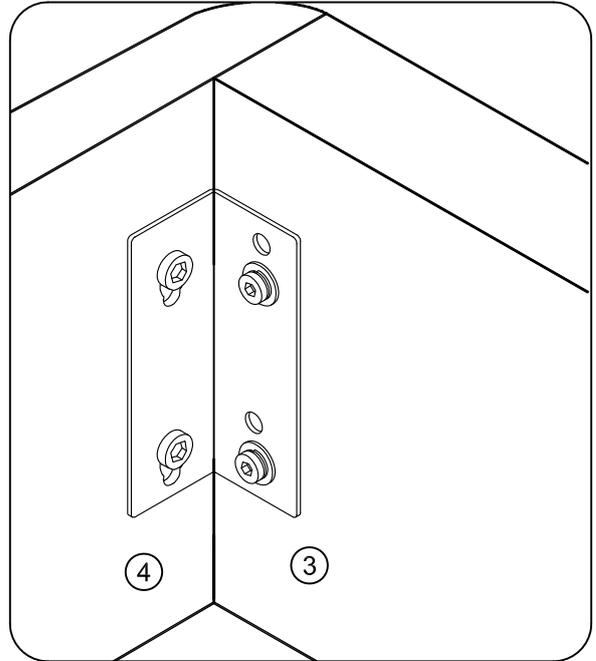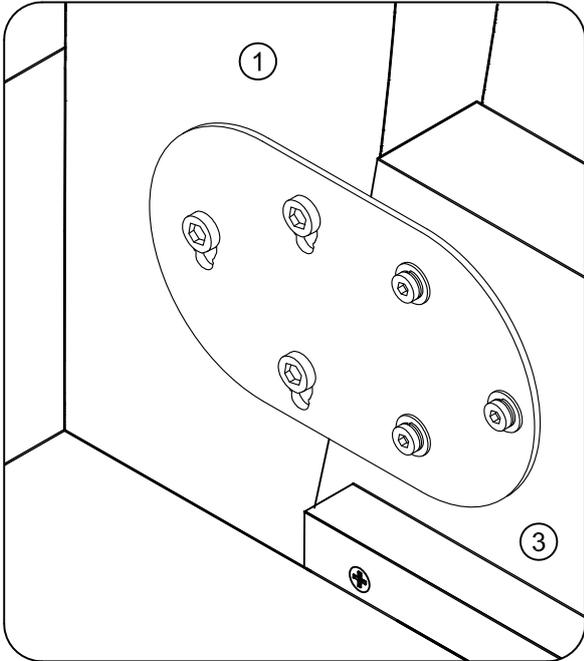


8


Lx4




Ø20x3mm



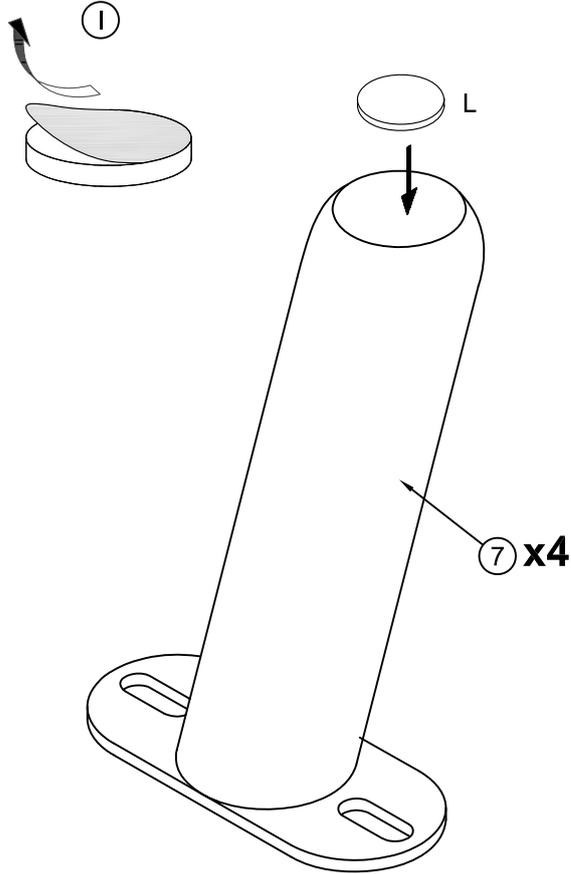




9

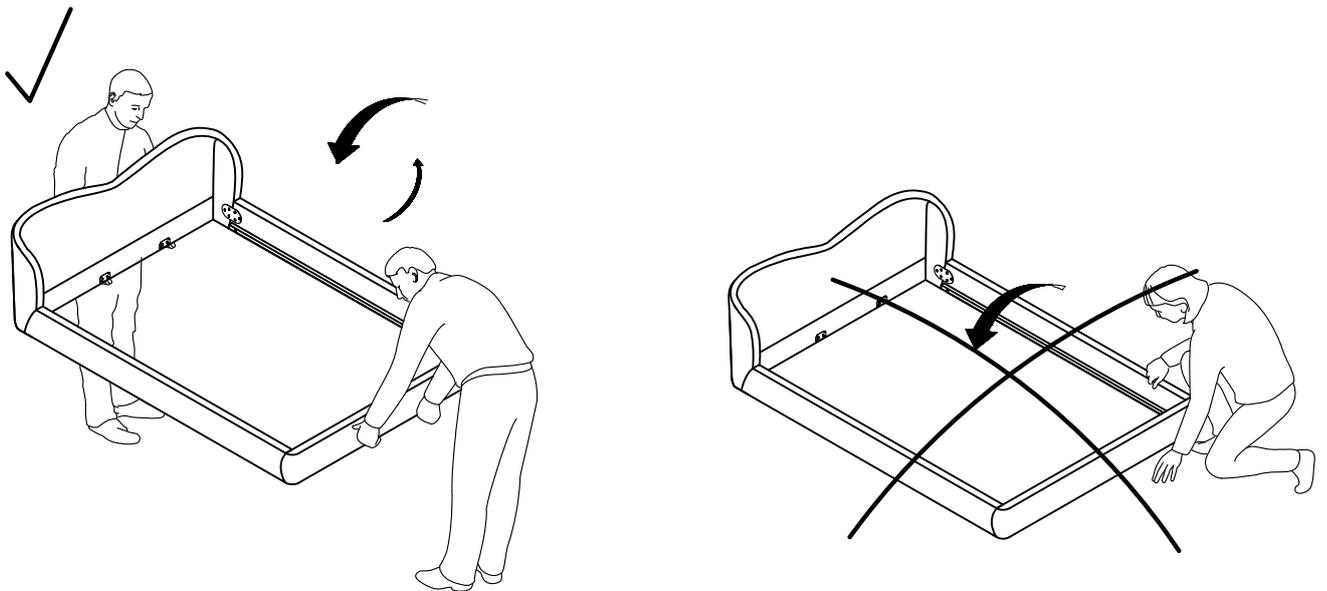




**BEFORE TURNING BED UPSIDE DOWN, MAKE SURE THE SURFACE BELOW IS CLEAN AND FREE OF DUST. WE RECOMMEND USING TWO PEOPLE TO MOVE THE BED**

Ax8  M8x25mm	Fx8  Ø8/Ø19mm	Gx8  Ø8/Ø13mm	Hx1  5mm
---	--	--	---

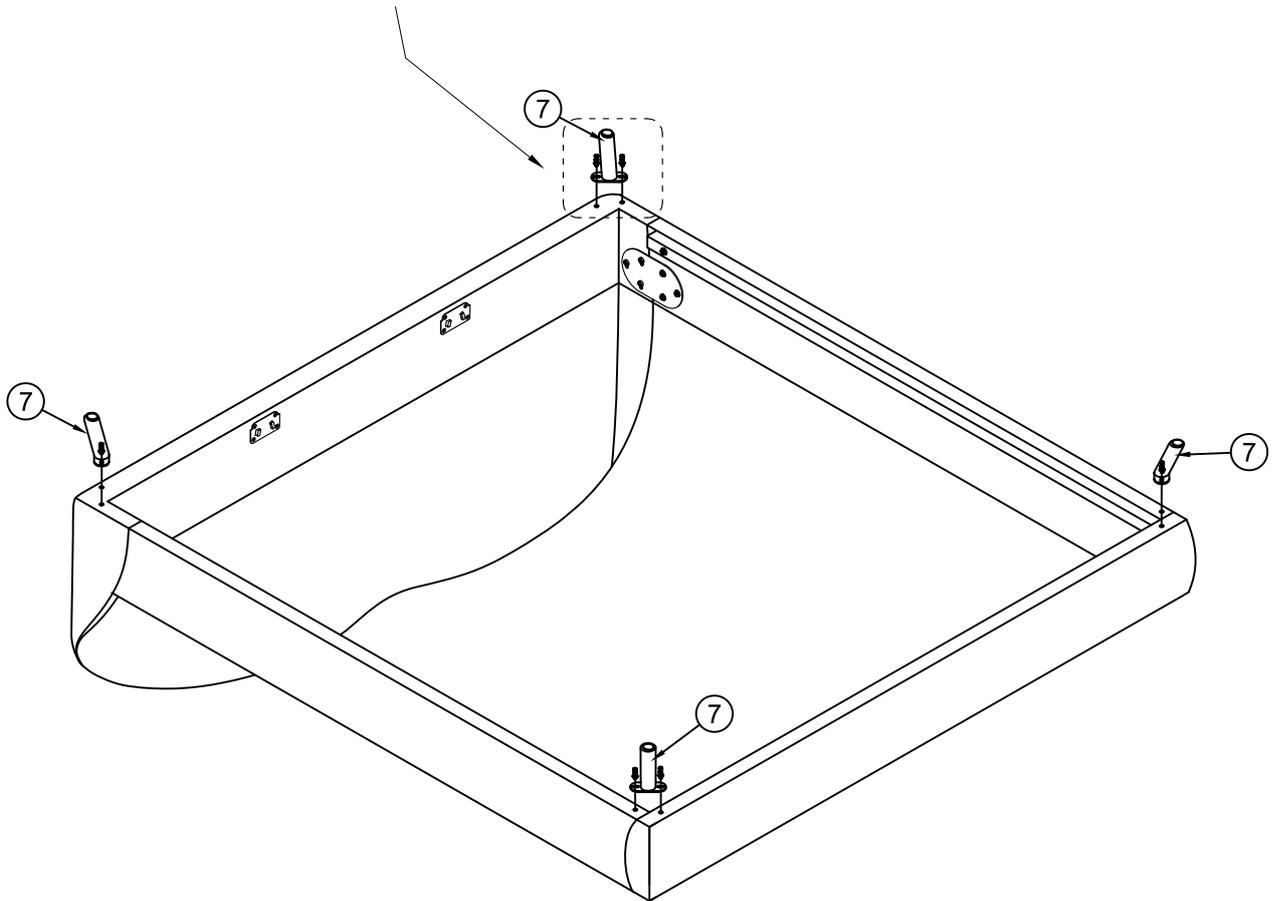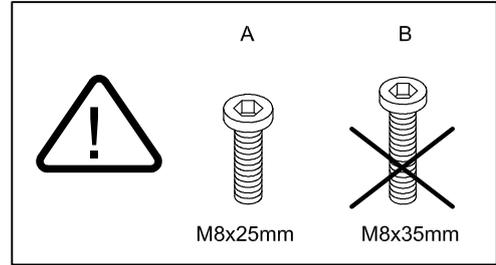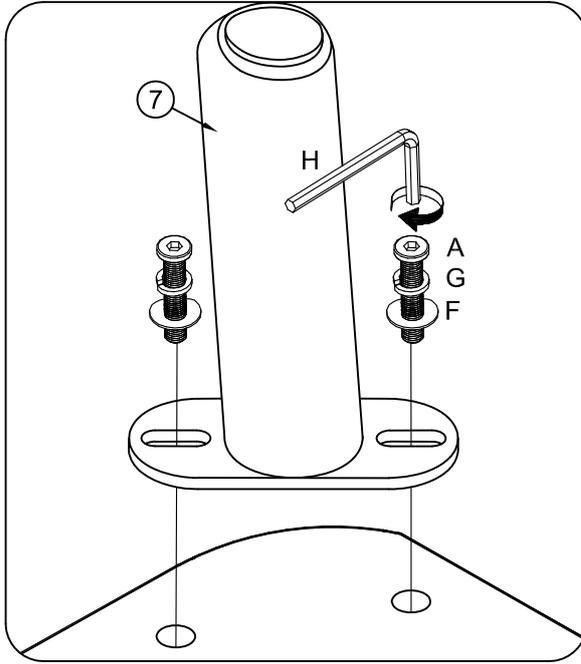

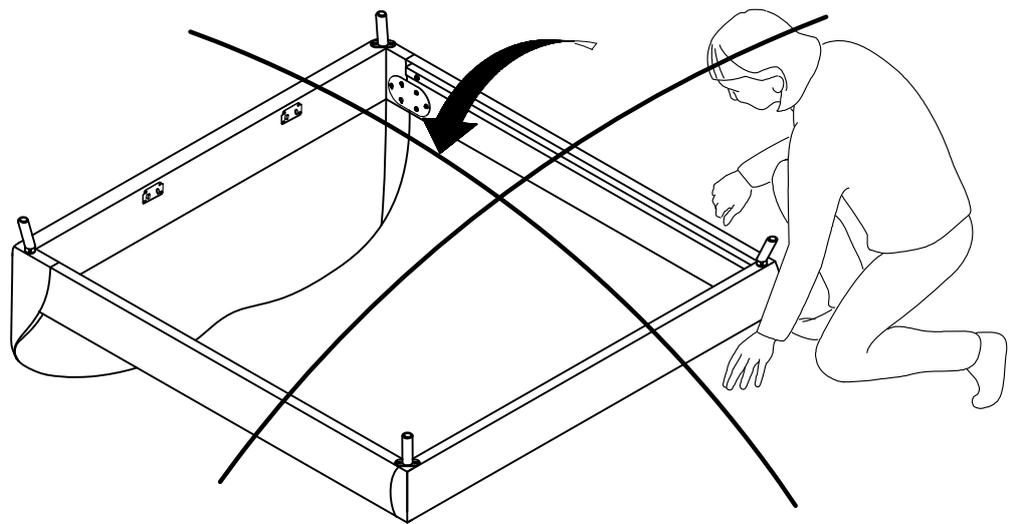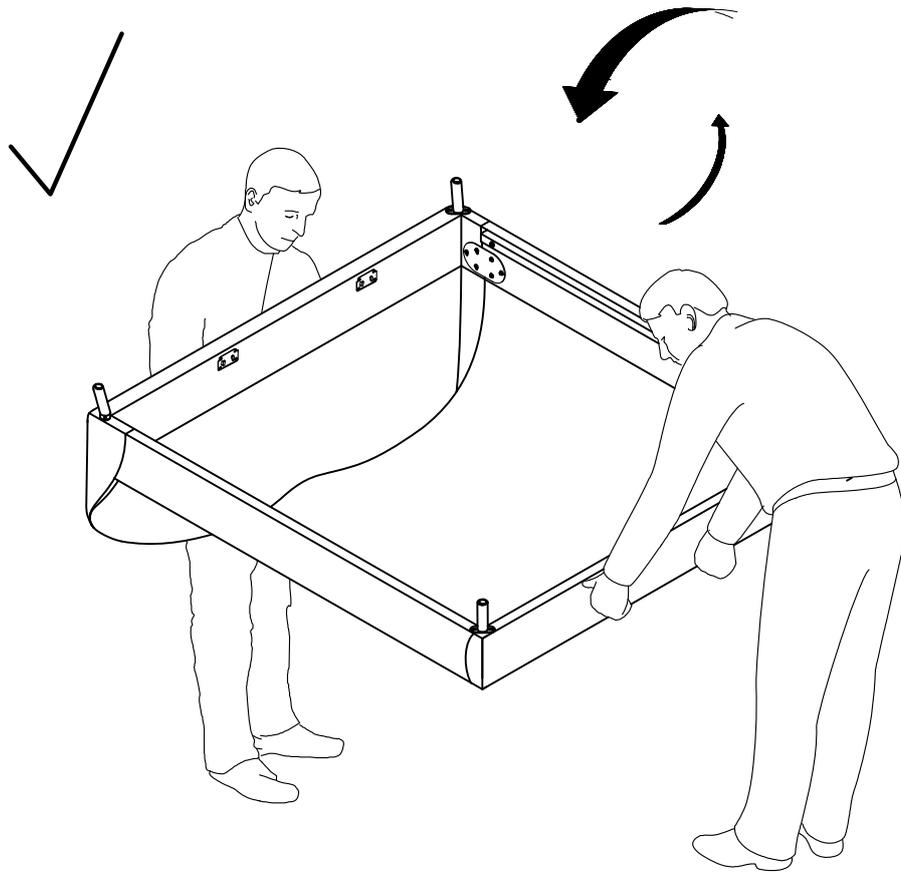

Bx8  M8x35mm	Ex8  M8/13 mm	Fx16  Ø8/Ø19mm	Gx8  Ø8/Ø13mm	Hx1  5mm	Mx1  13mm
---	--	---	--	---	--

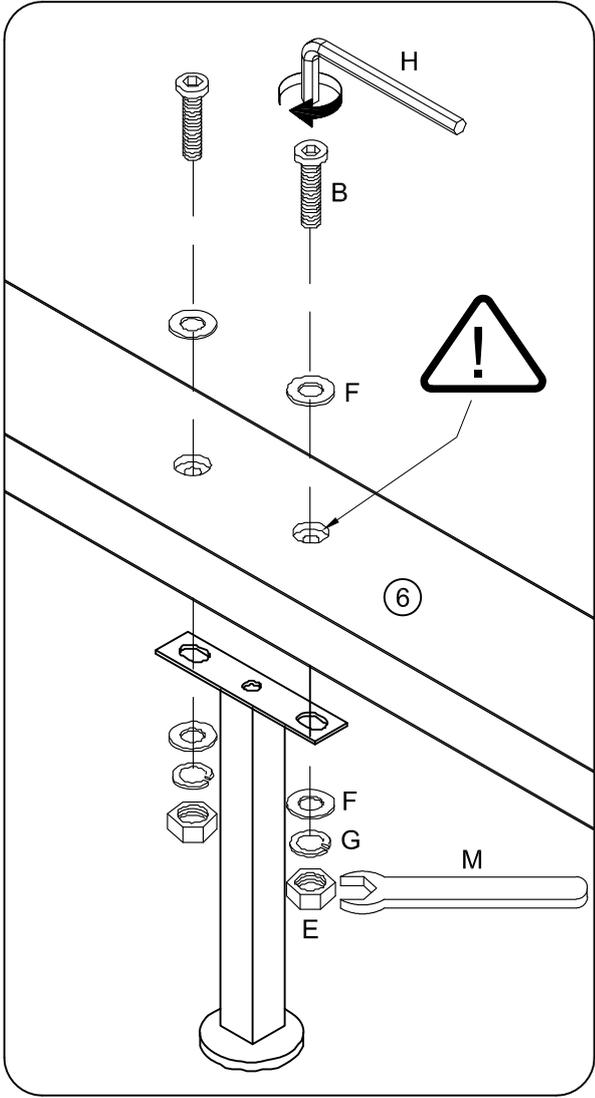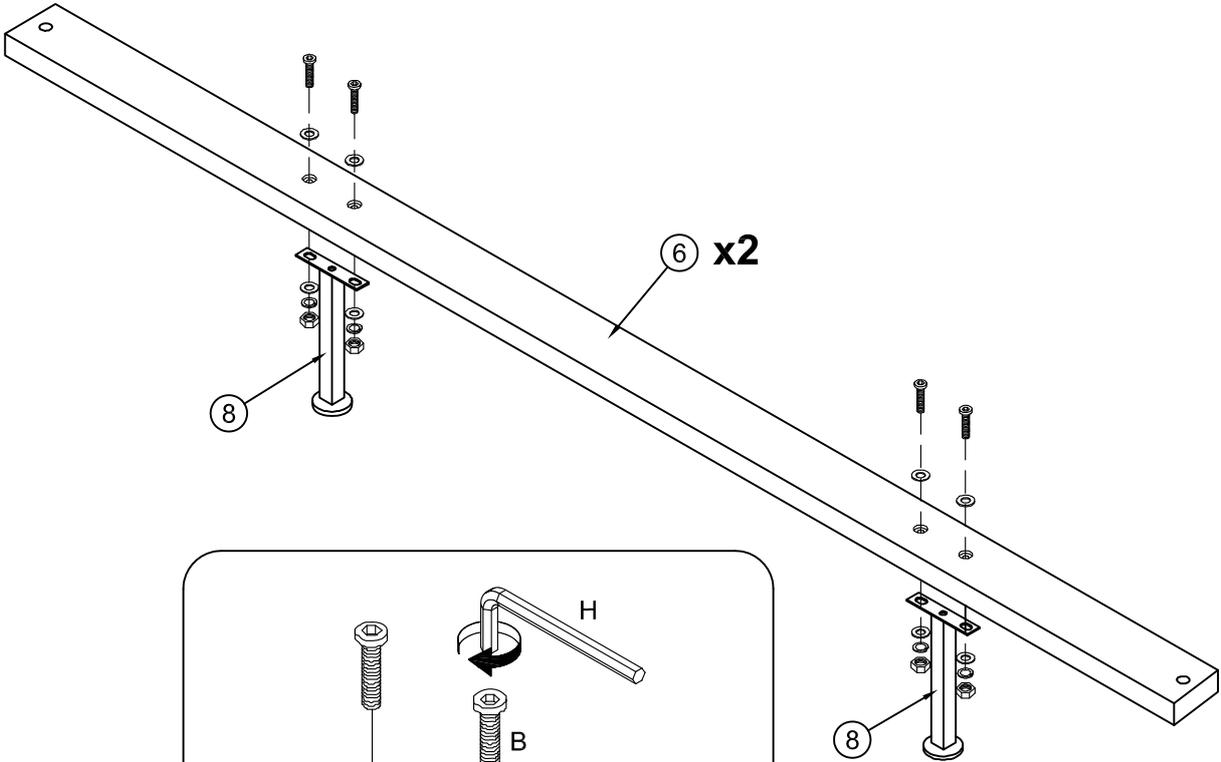

Cx4









M6x15mm

Jx4




68x32x30mm

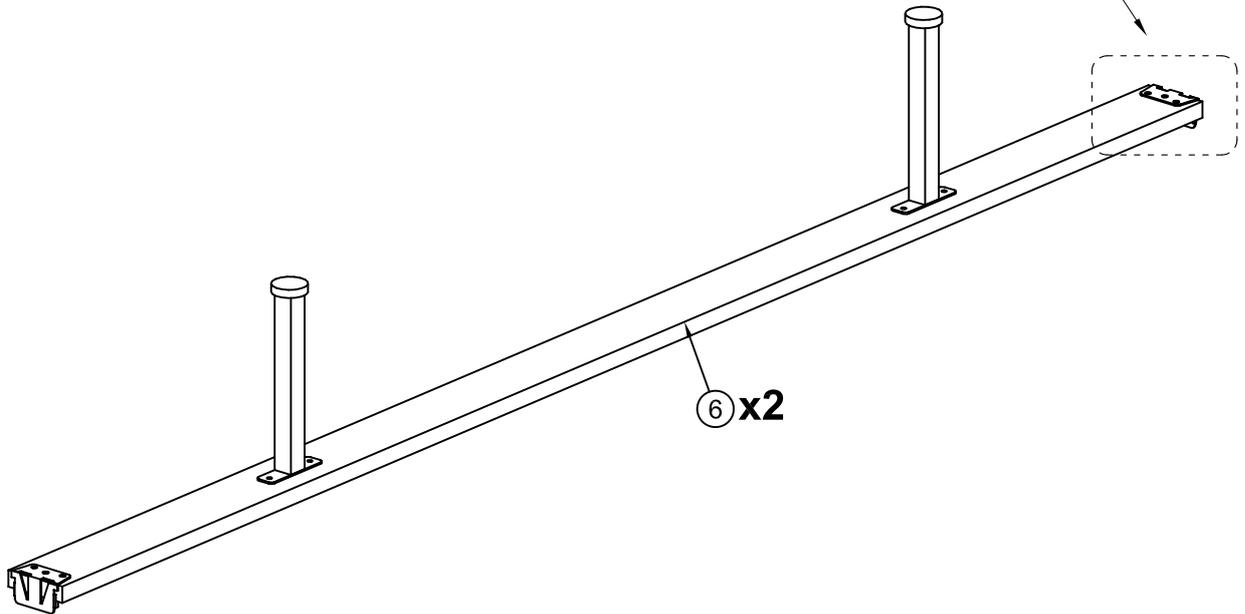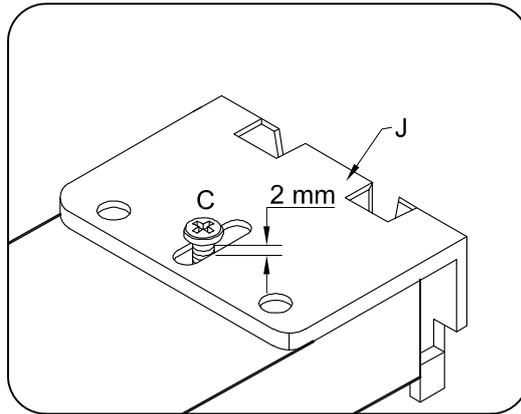


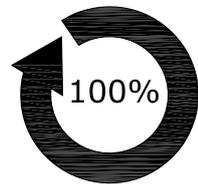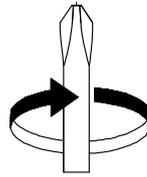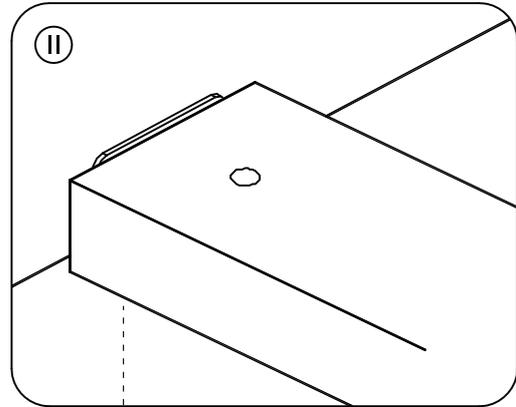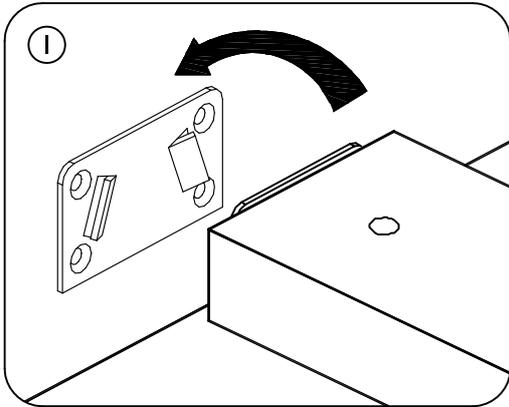


**NOW TIGHTEN BOLTS TO 100%**

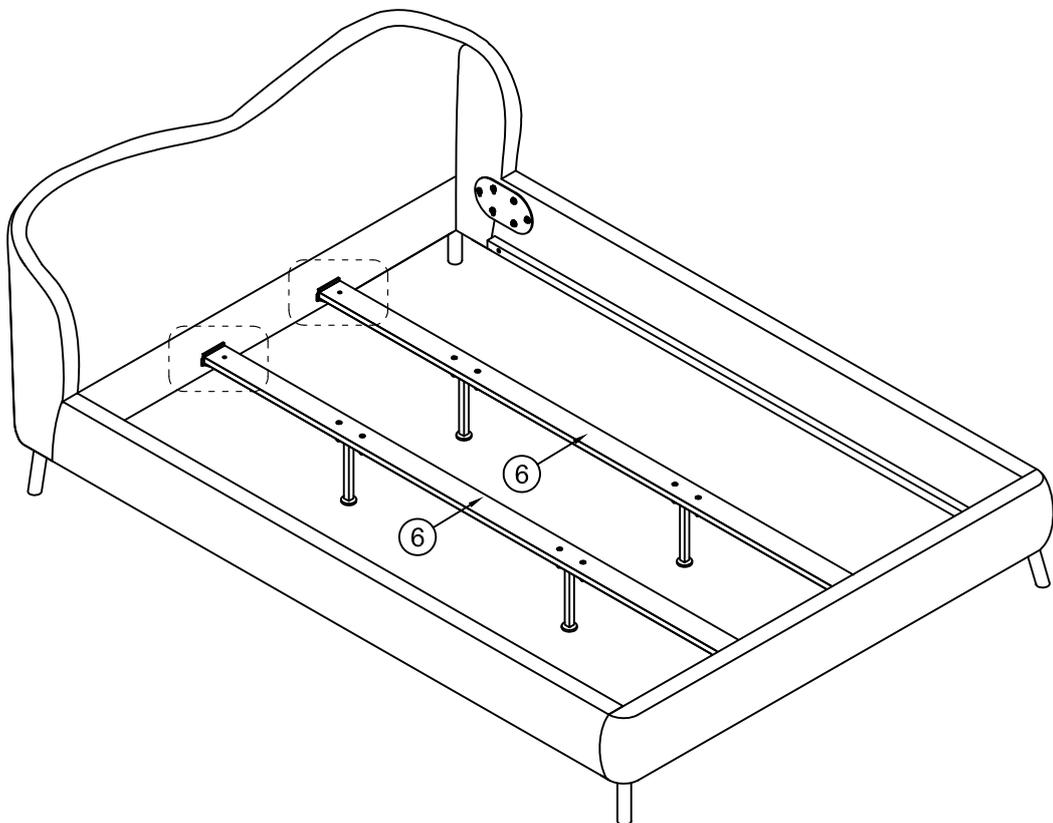

15

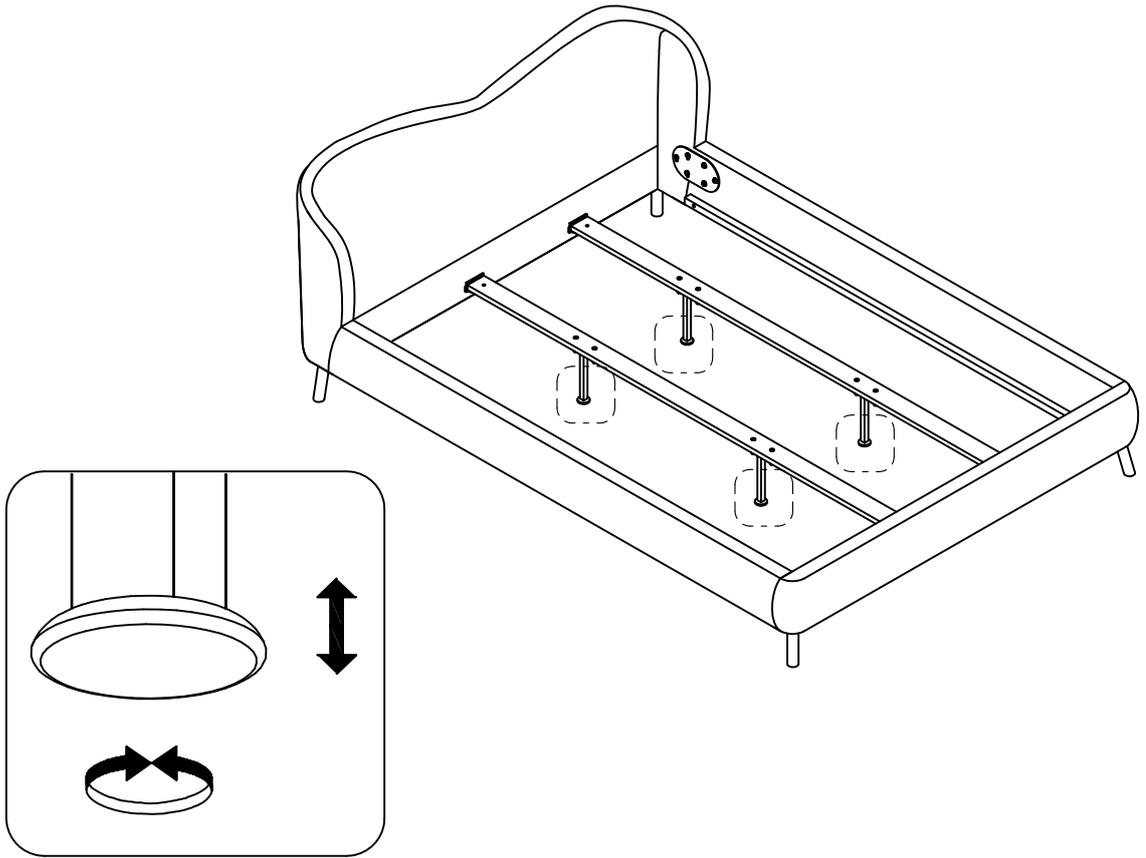

16

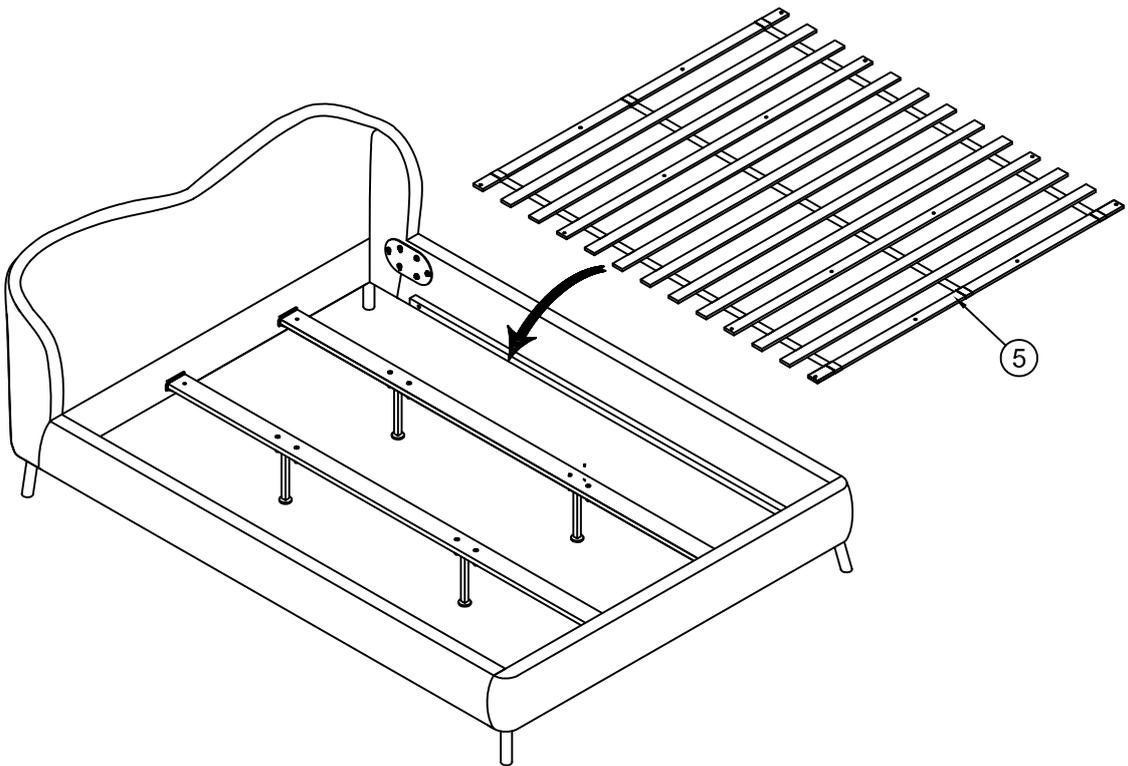

Dx16



Ø5x25mm

