
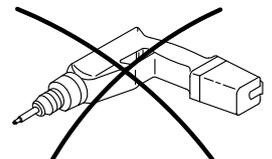
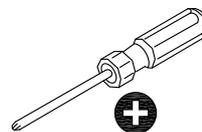
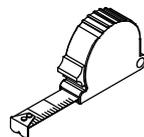
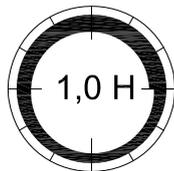
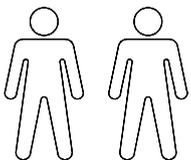


ASSEMBLY INSTRUCTIONS


JULIETTE KING SINGLE FULL BED

Please read instructions carefully. Remove all wrapping material and packing from the carton. See hardware and furniture parts list for guidance. Be sure you have all parts before you start to assemble the product. Place all furniture parts on a clean surface, such as carpet or rug to prevent the item from being scratched.

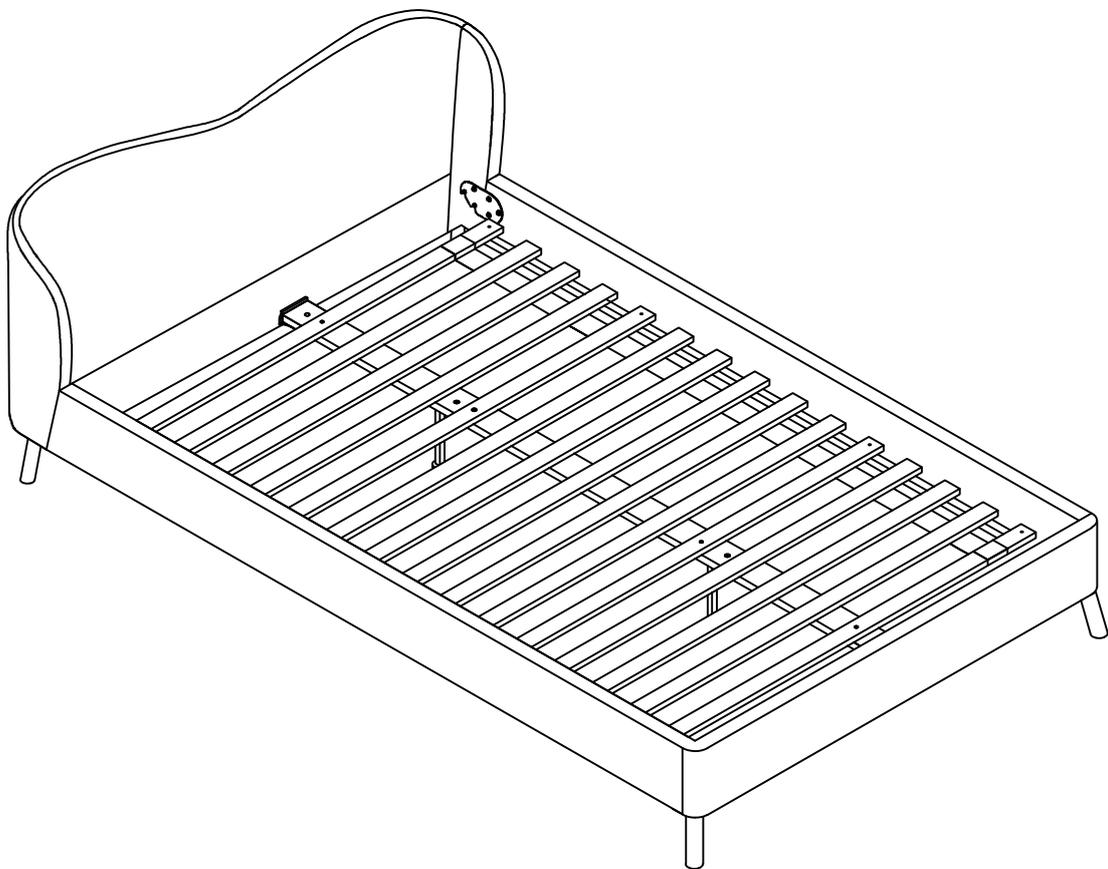

Part list:

1 x Part 1

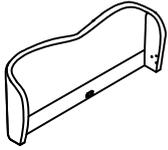

Headboard

1 x Part 2



Side rail left

1 x Part 3




Side rail right

1 x Part 4



Footboard

1 x Part 5

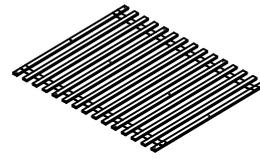

Slats

1 x Part 6



Middle support

4 x Part 7



Leg

2 x Part 8



Support leg

Hardware list:

Ax28



Bolt
M8x25

Bx4



Bolt
M8x35

Cx2



Bolt
M6x15

Dx12




Screw
Ø5x25

Ex4



Nut
M8/13

Fx28



Washer
Ø8/Ø19

Gx24



Spring washer
Ø8/Ø13

Hx1



Allen key
5mm

Jx2



Bracket
68x47x32

Kx2



Connecting plate
207x120x3

Lx4



Felt
Ø25x3

Mx1









Spanner
13


Nx2







Bracket
130x47x47



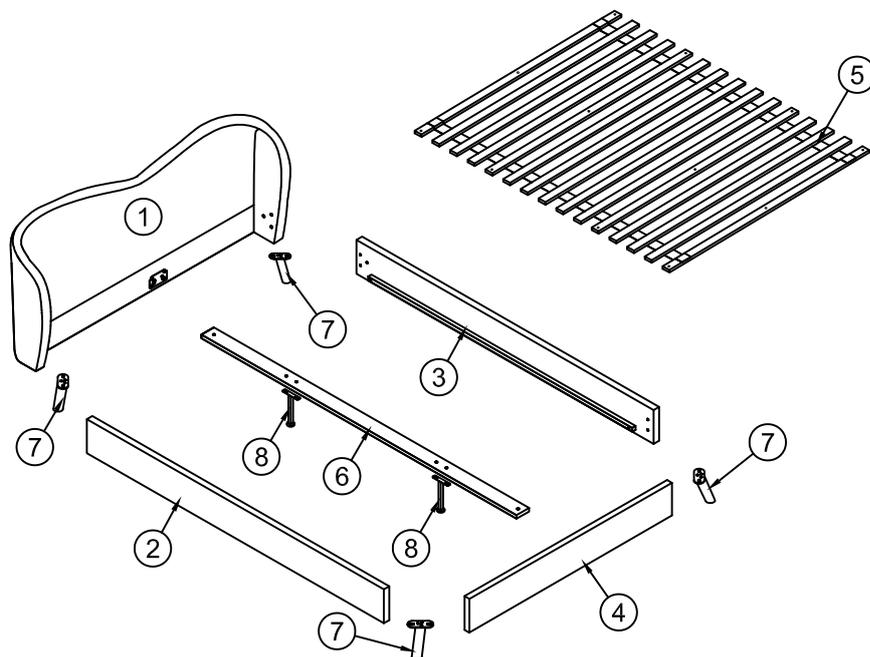


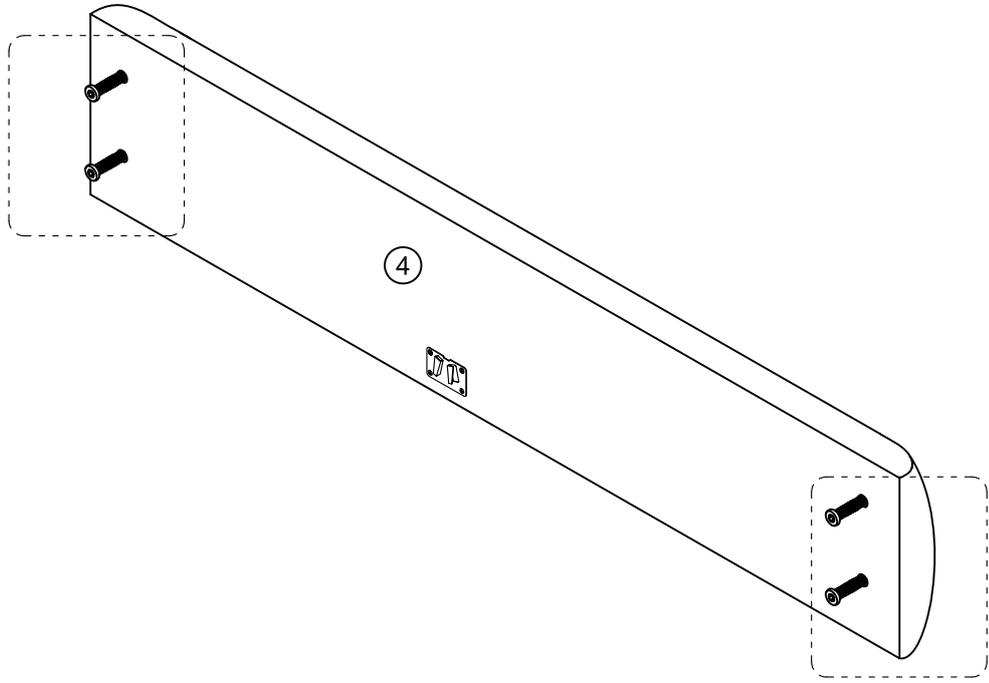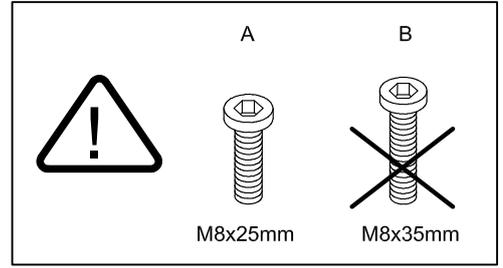
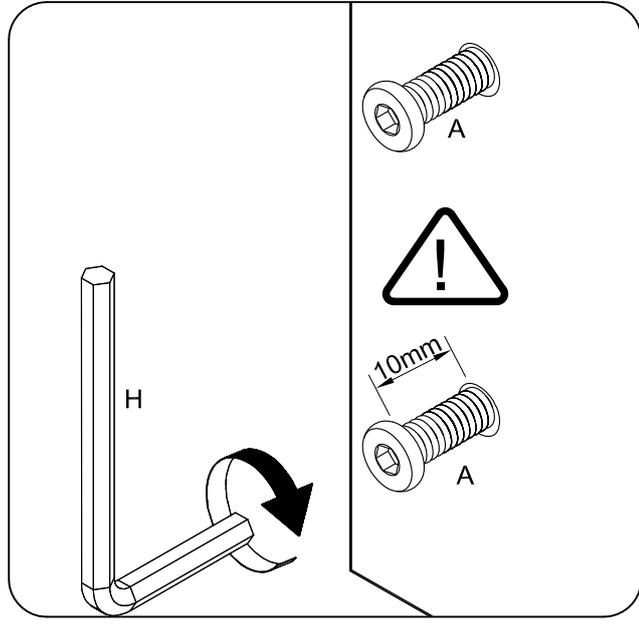
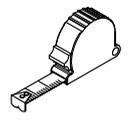
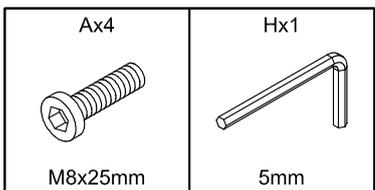




Ax6  M8x25mm	Fx6  Ø8/Ø19mm	Gx6  Ø8/Ø13mm	Hx1  5mm	Kx2  207x120x3mm
---	--	--	---	---

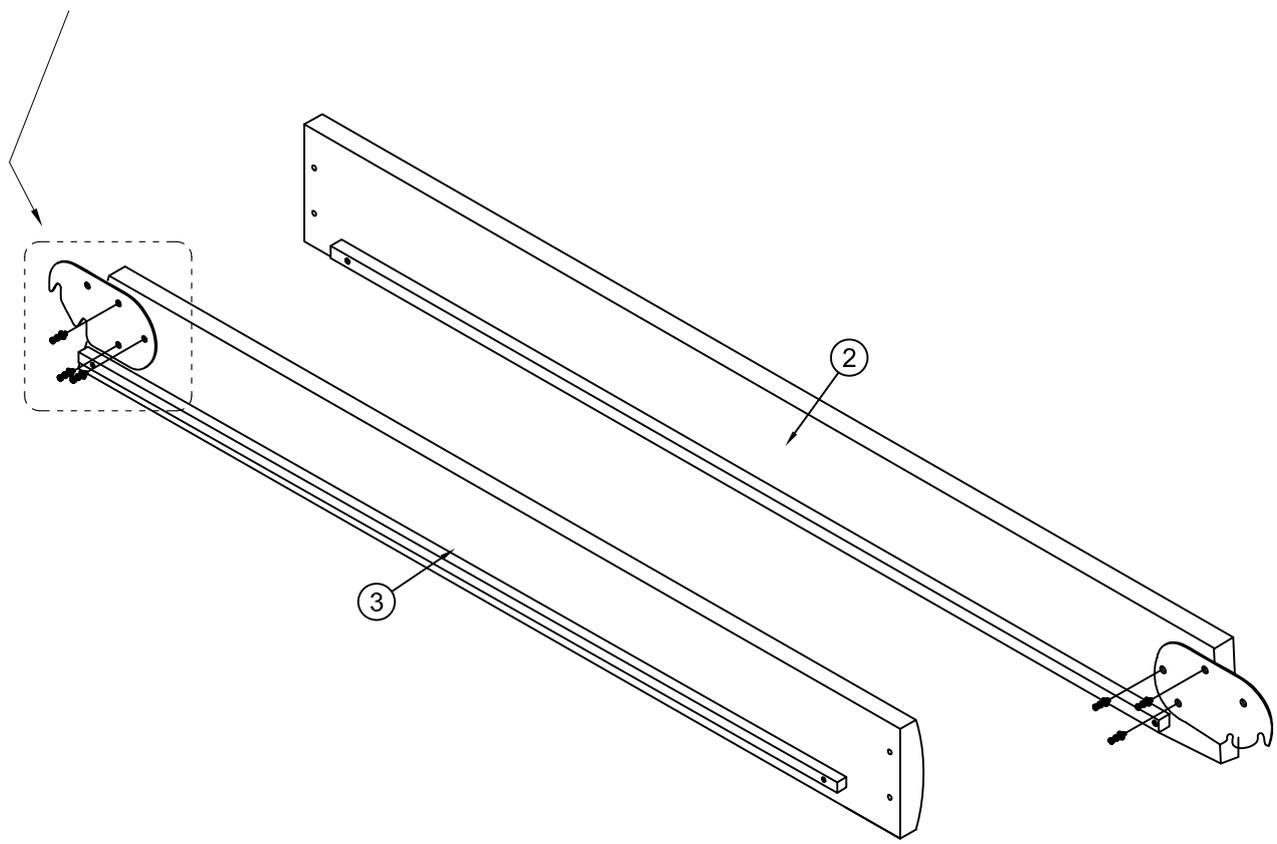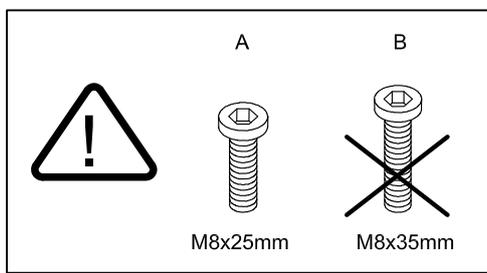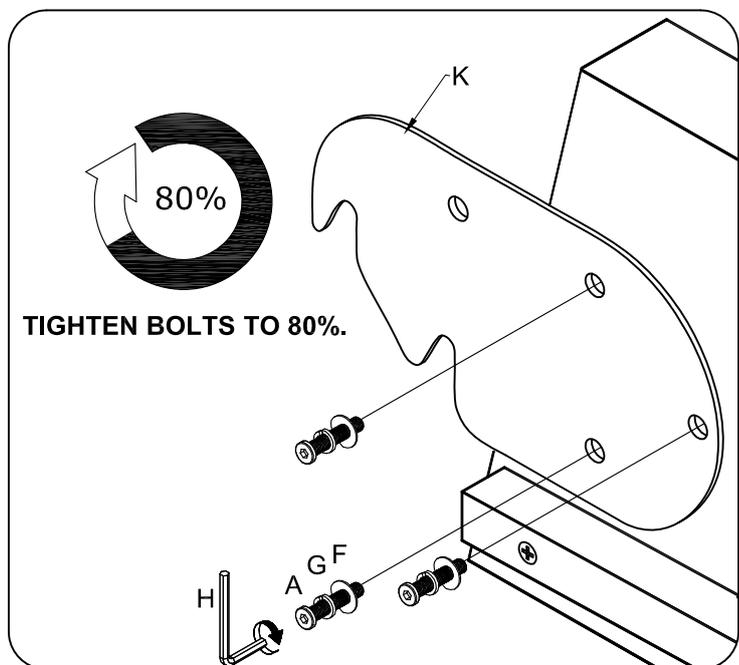





Ax4  M8x25mm	Fx4  Ø8/Ø19mm	Gx4  Ø8/Ø13mm	Hx1  5mm	Nx2  130x47x47mm
---	--	--	---	---

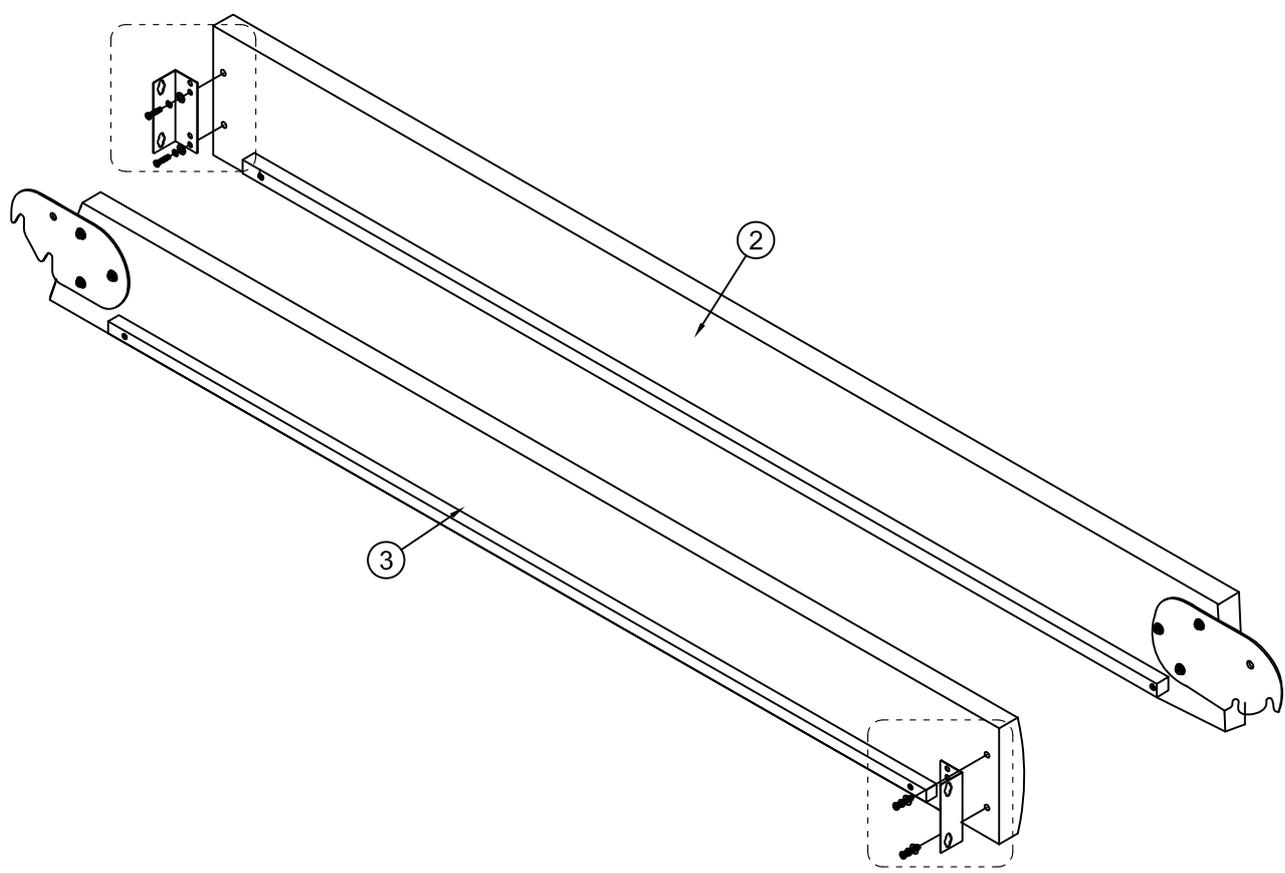
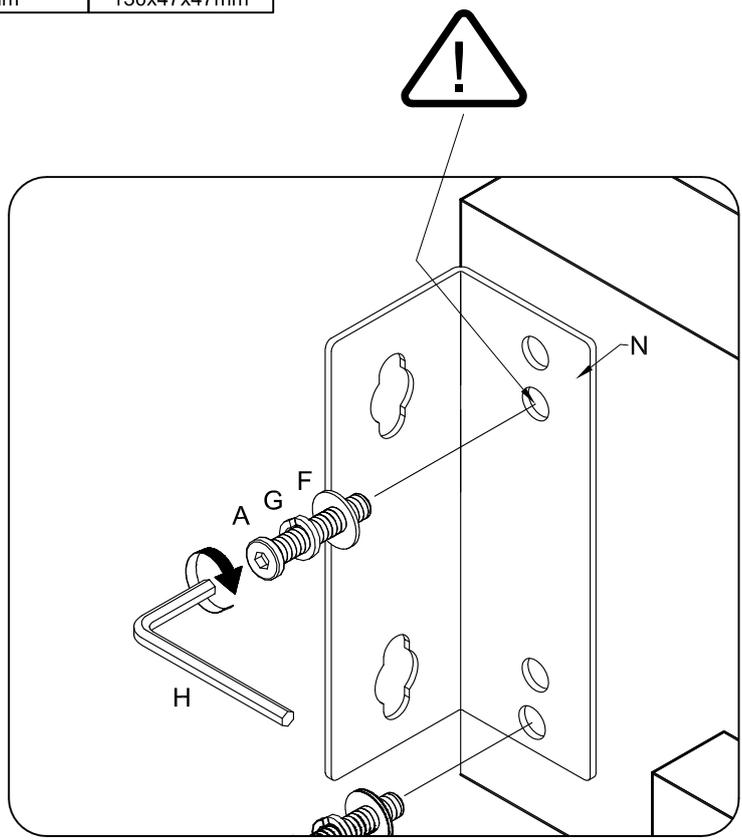
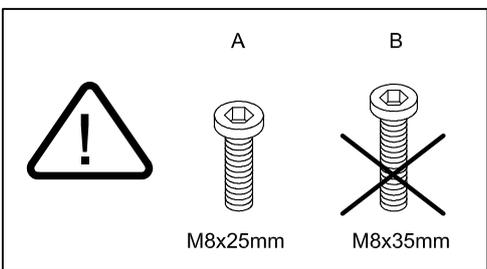


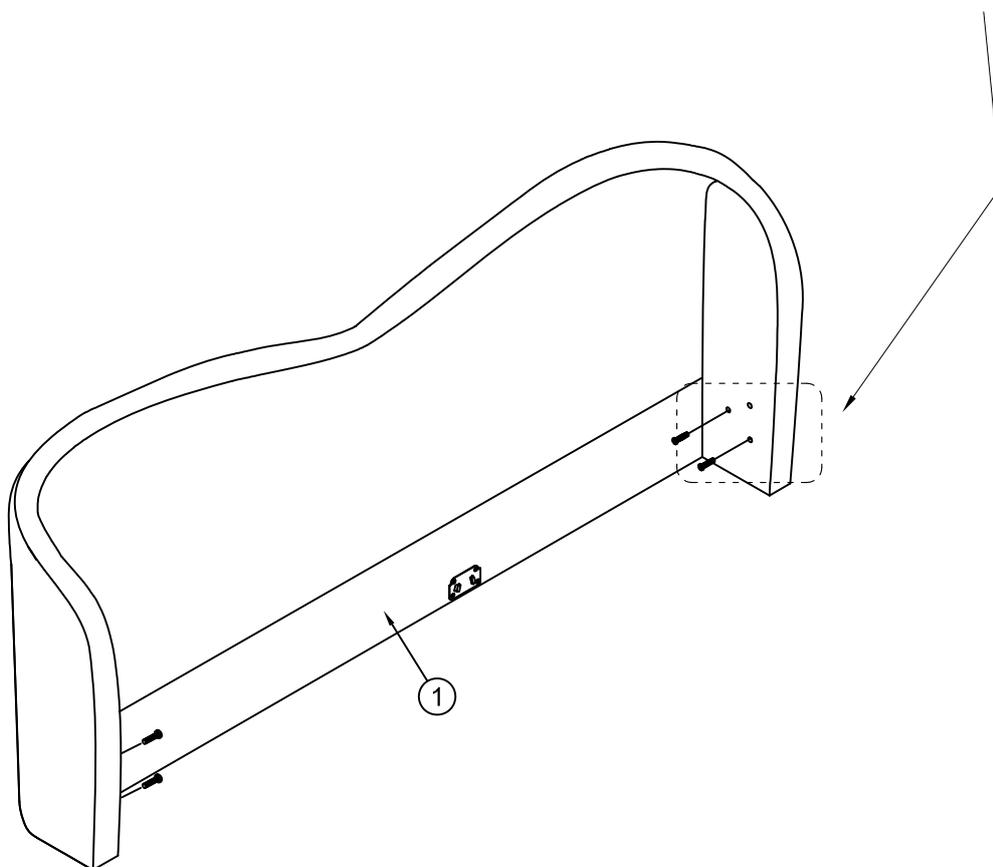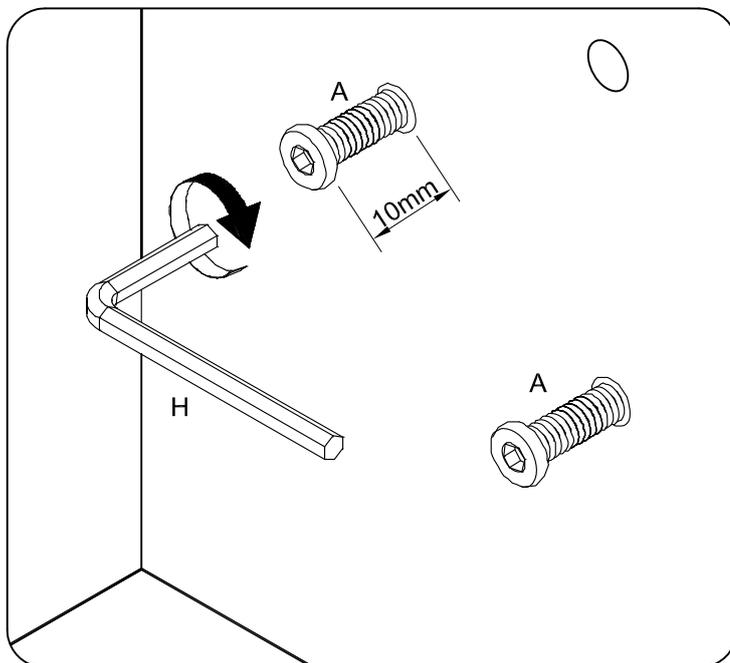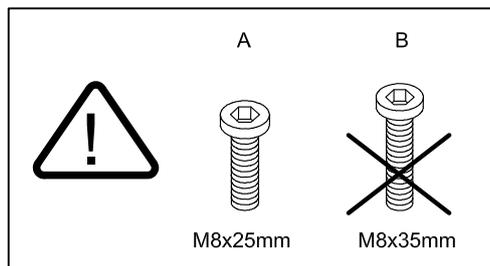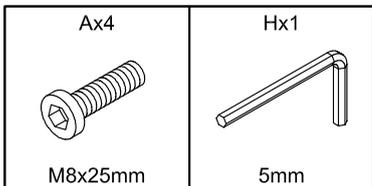

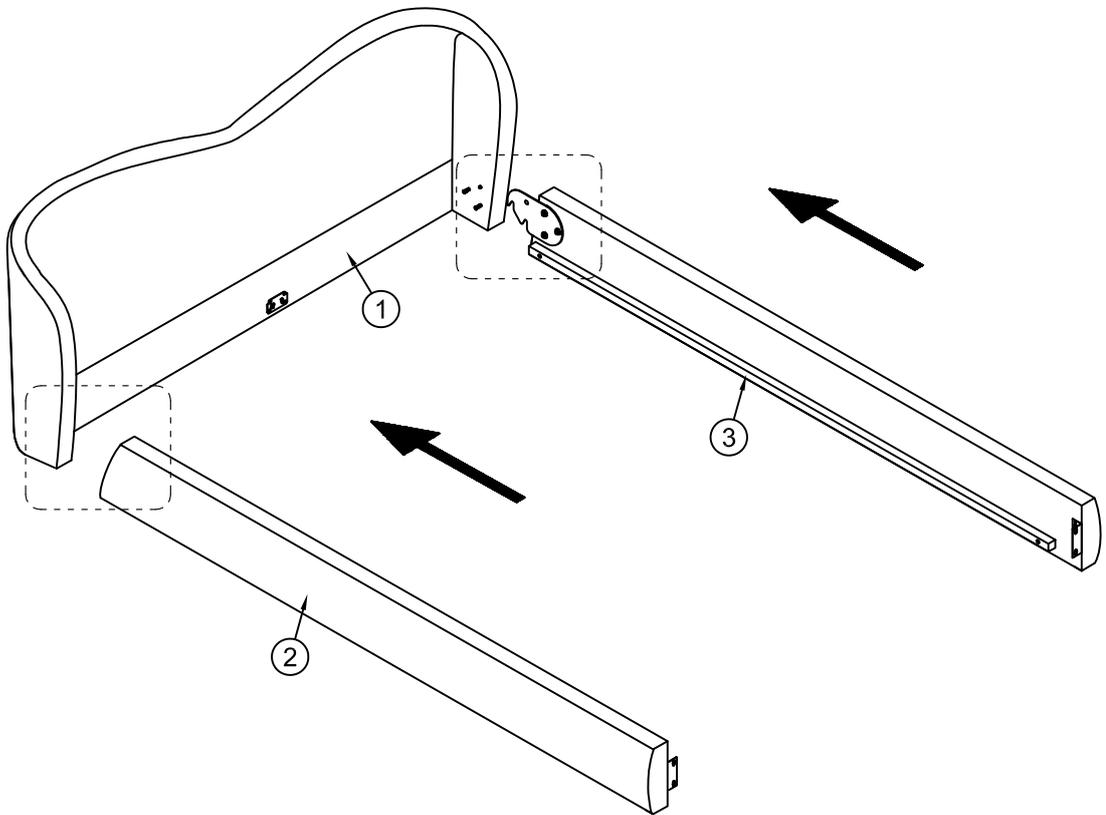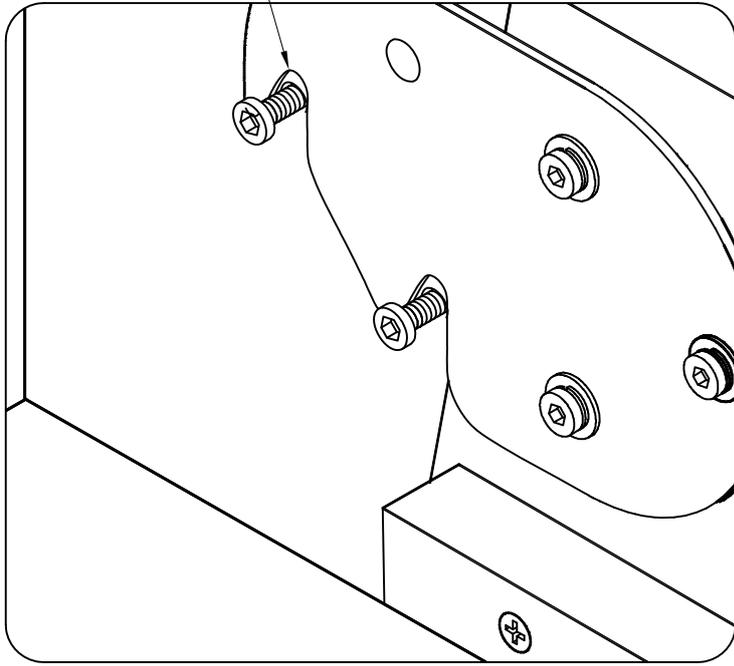

Ax2  M8x25mm	Fx2  Ø8/Ø19mm	Gx2  Ø8/Ø13mm	Hx1  5mm
---	--	--	---

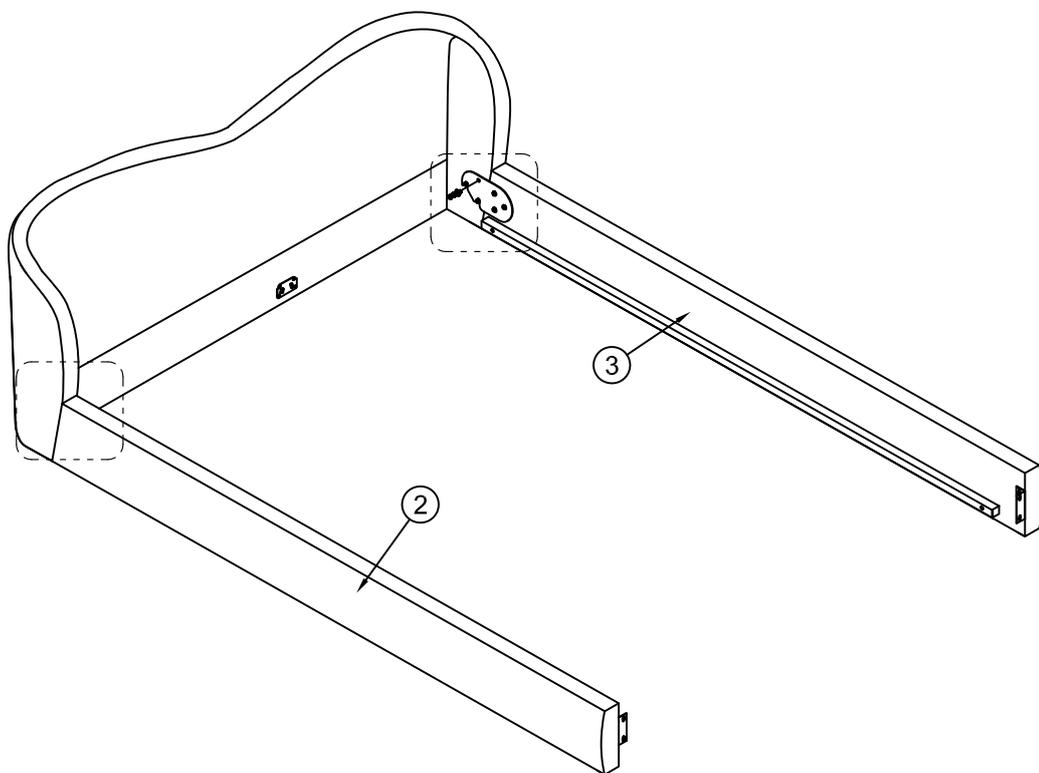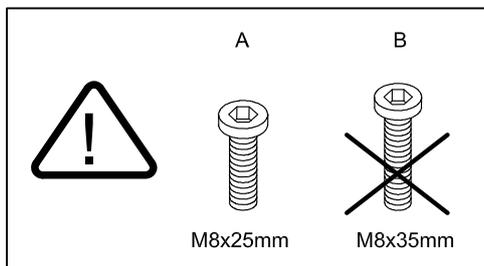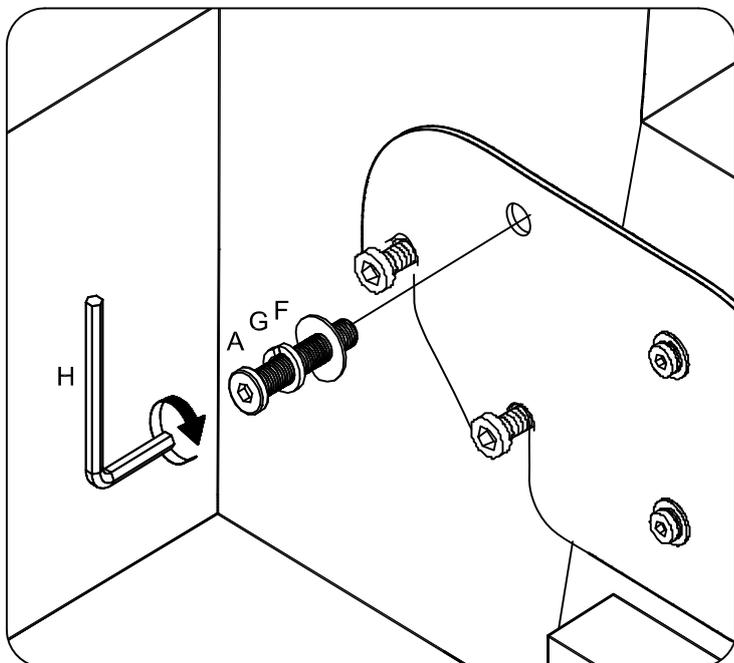


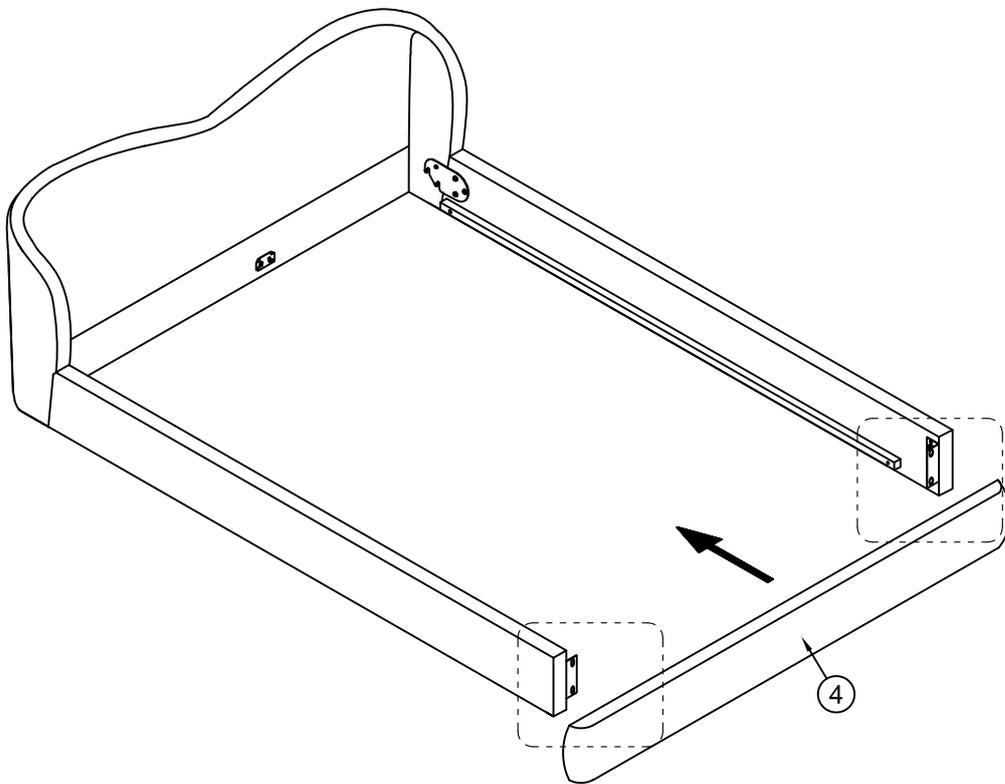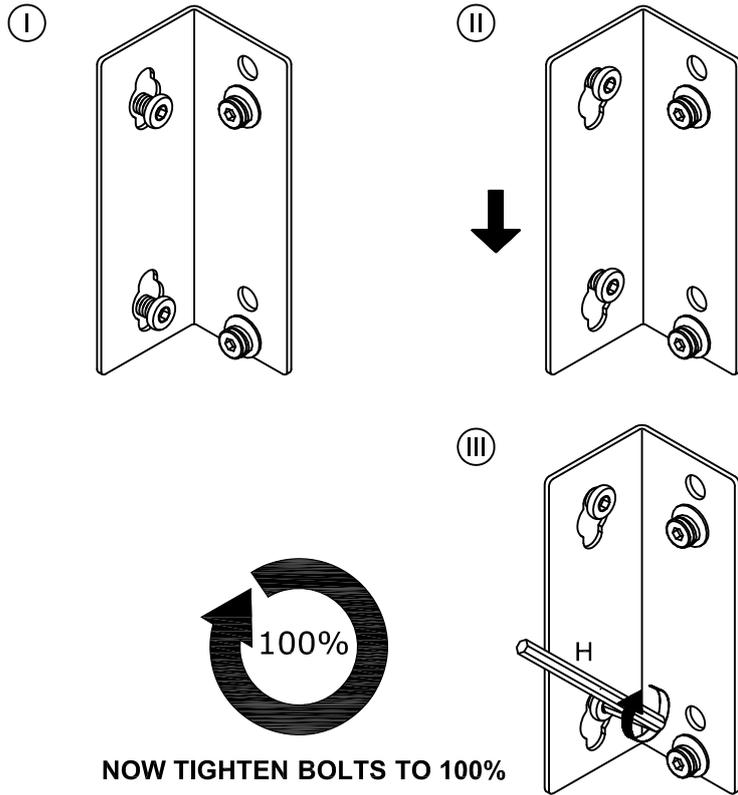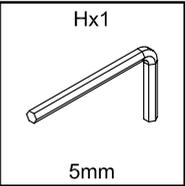



Hx1



5mm

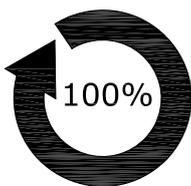


NOW TIGHTEN BOLTS TO 100%

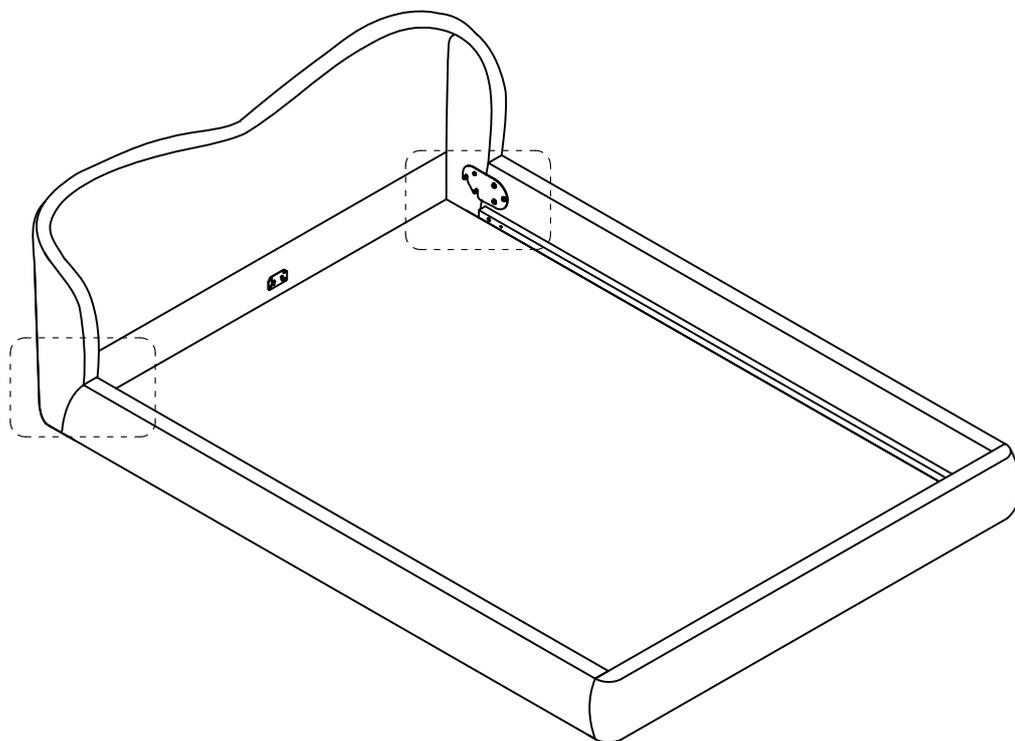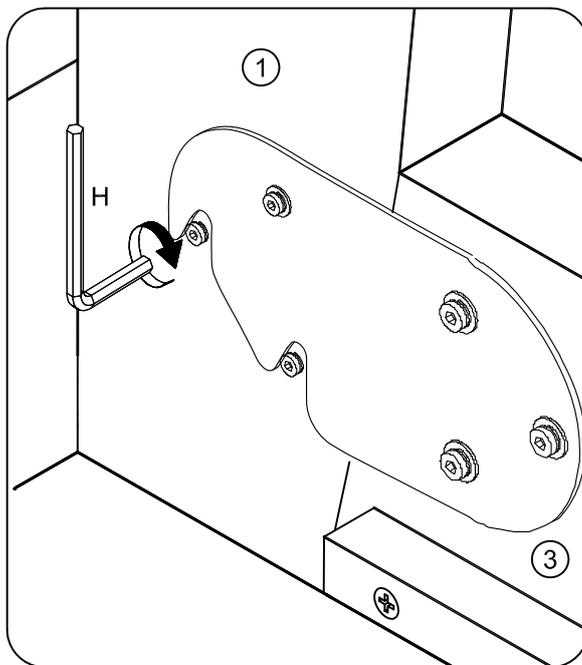


9


Lx4




Ø25x3mm



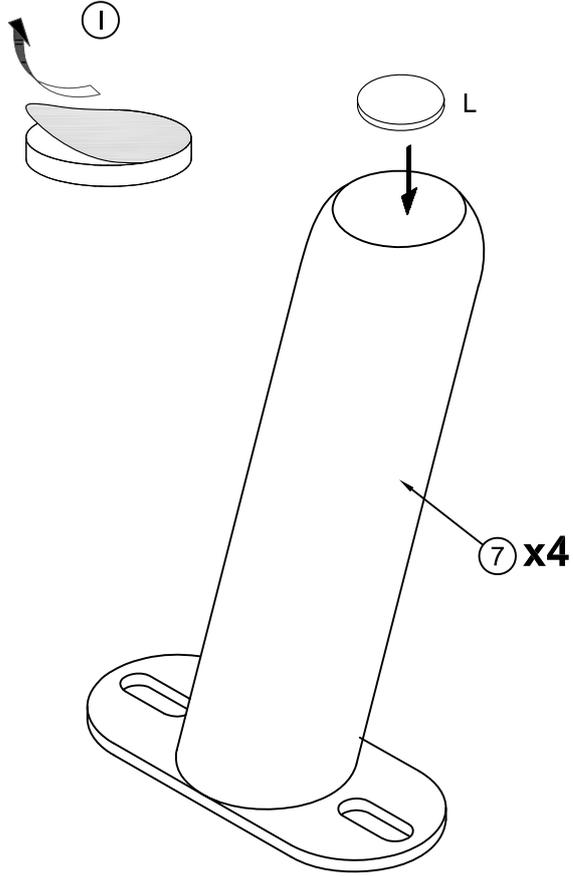




10

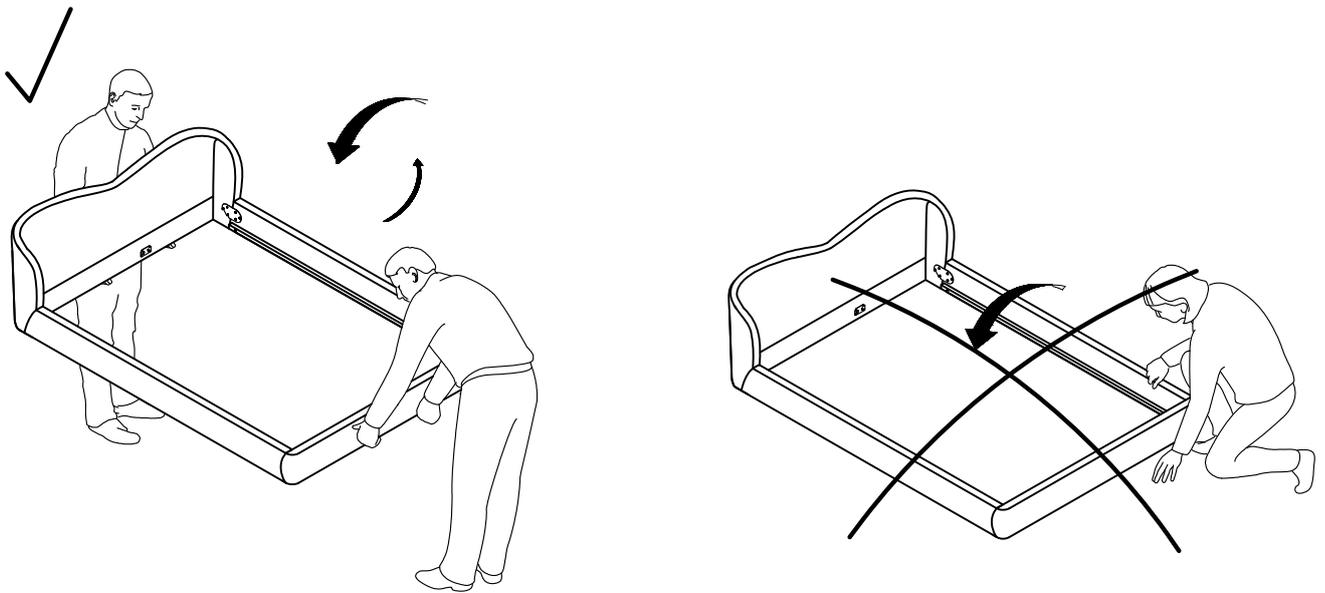




BEFORE TURNING BED, MAKE SURE THE SURFACE BELOW IS CLEAN AND FREE OF DUST. WE RECOMMEND USING TWO PEOPLE TO MOVE THE BED

Ax8  M8x25mm	Fx8  Ø8/Ø19mm	Gx8  Ø8/Ø13mm	Hx1  5mm
---	--	--	---

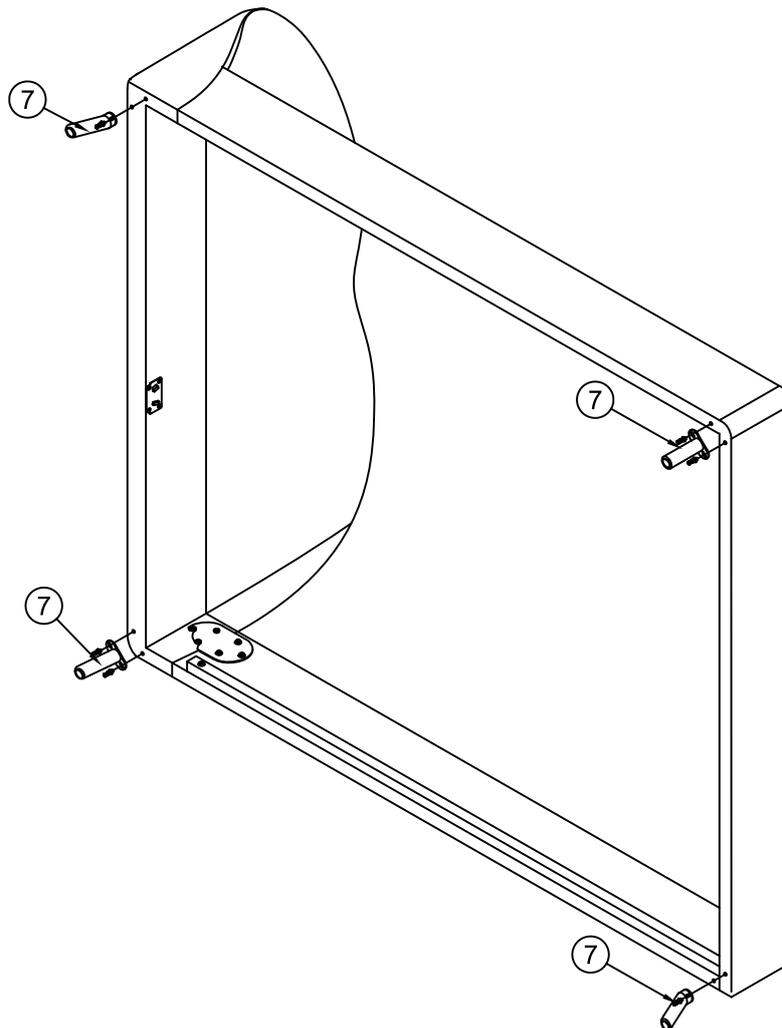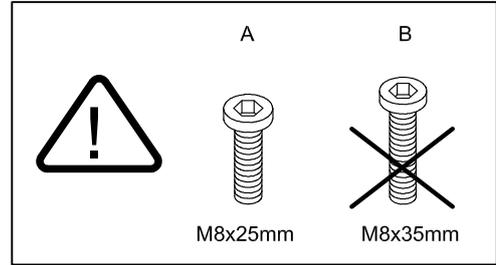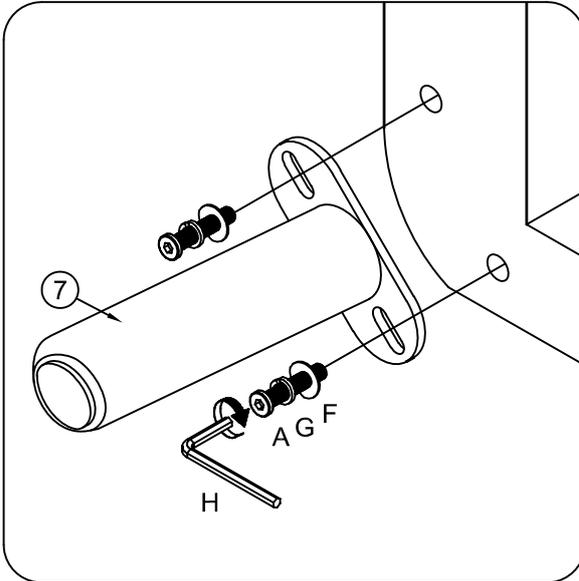

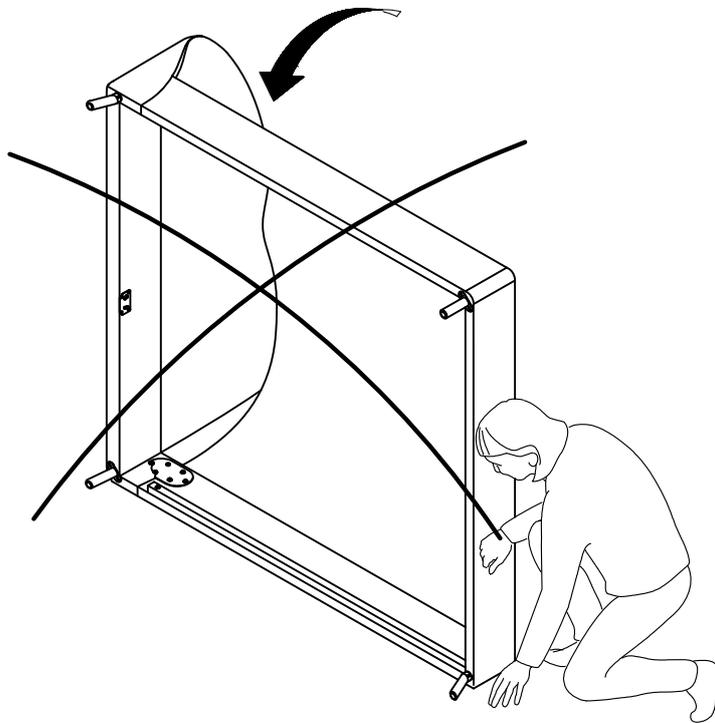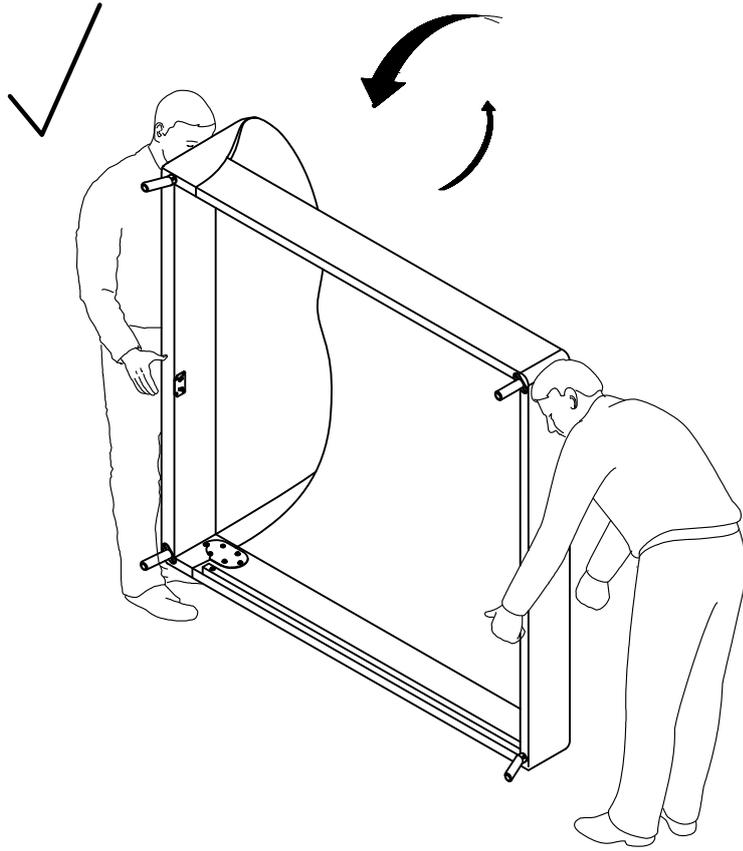

Bx4  M8x35mm	Ex4  M8/13 mm	Fx8  Ø8/Ø19mm	Gx4  Ø8/Ø13mm	Hx1  5mm	Mx1  13mm
---	--	--	--	---	--

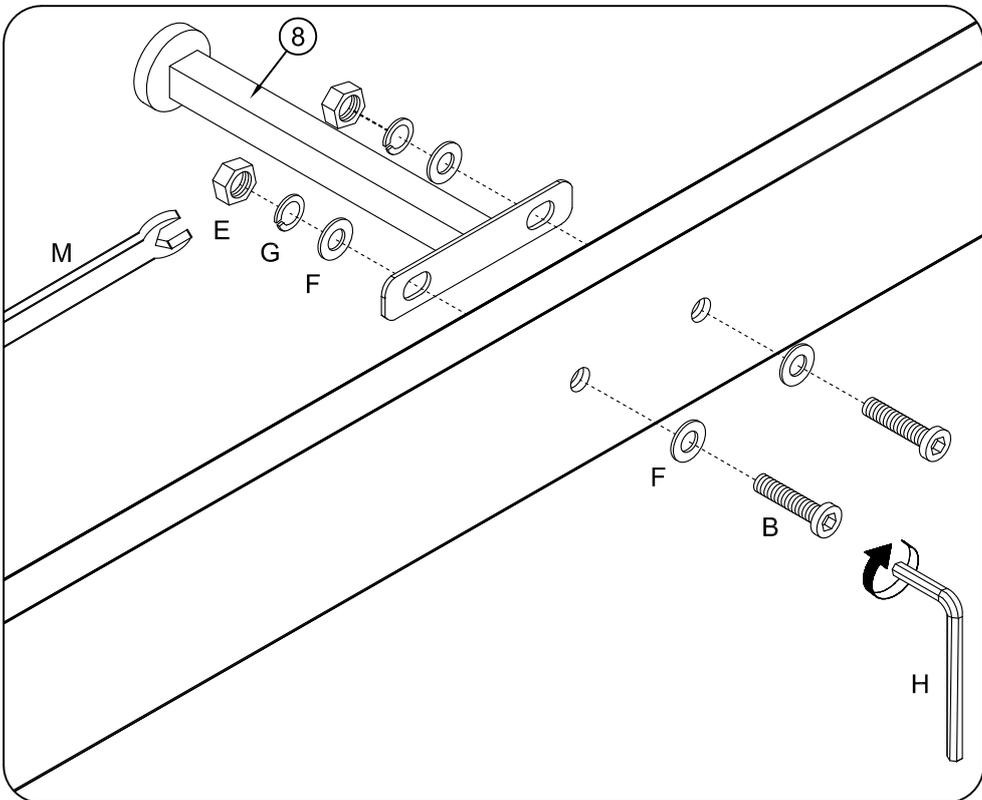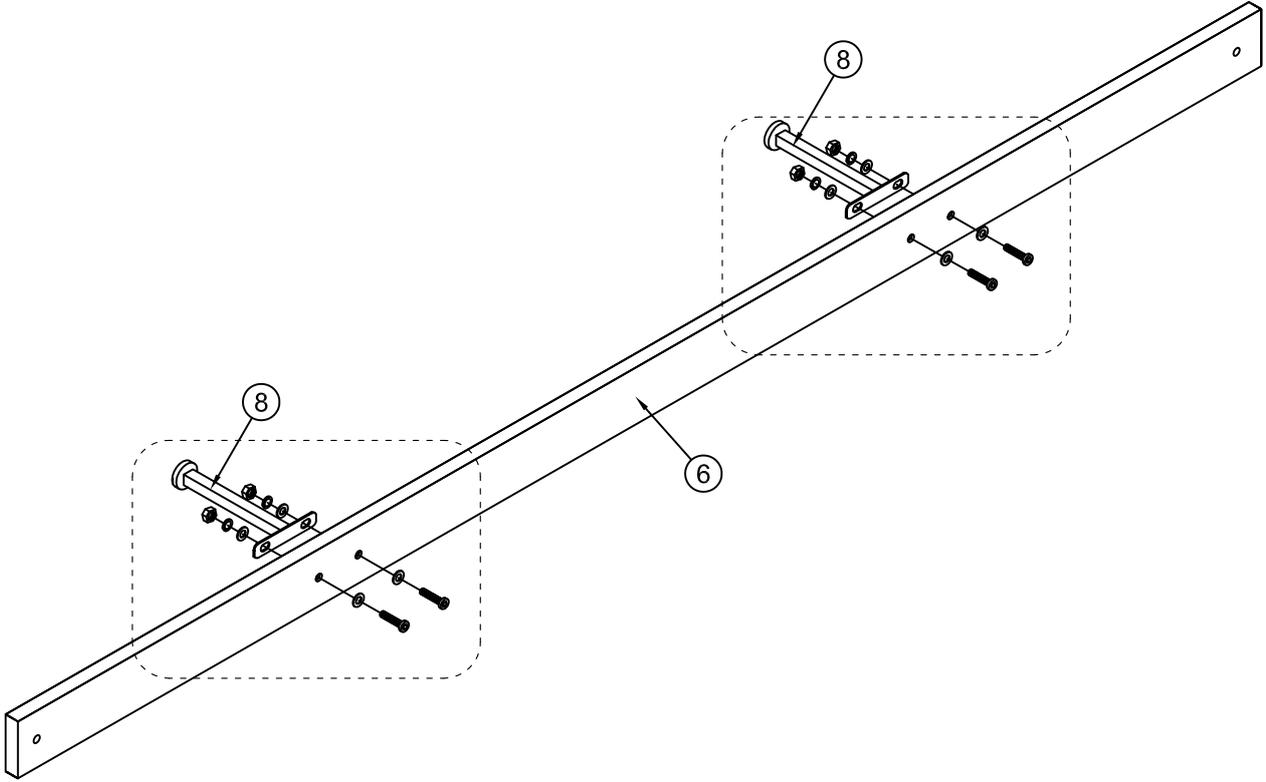

Cx2








M6x15mm

Jx2




68x47x32mm

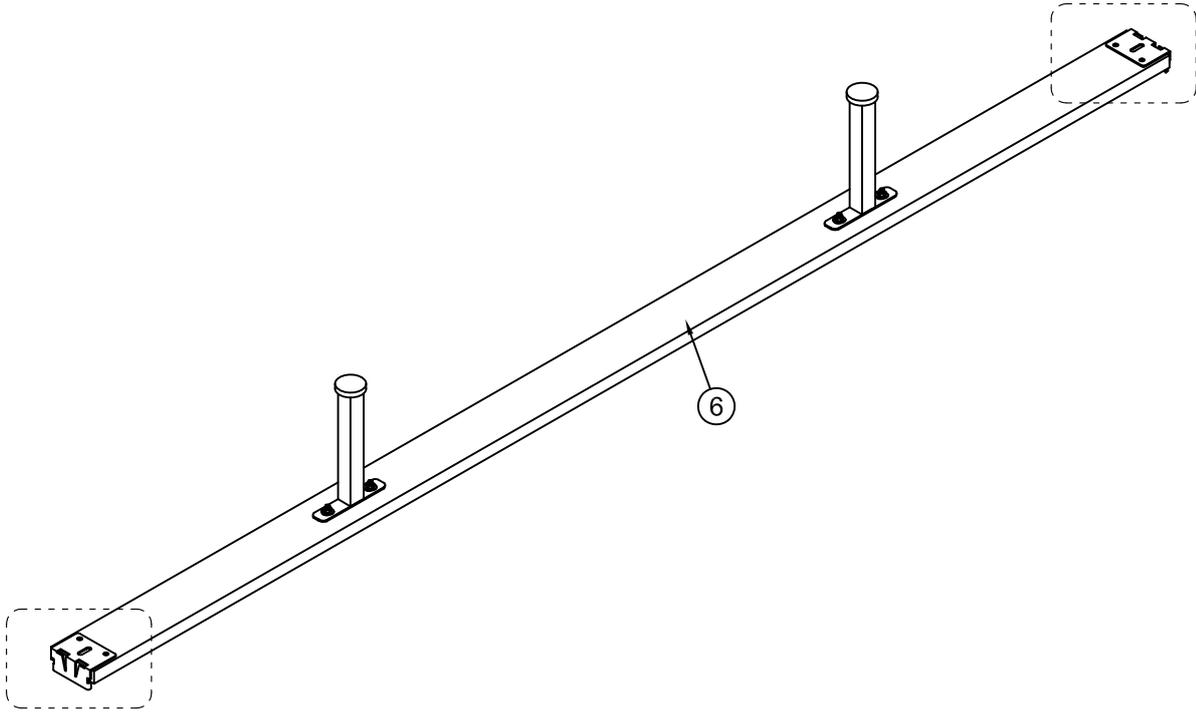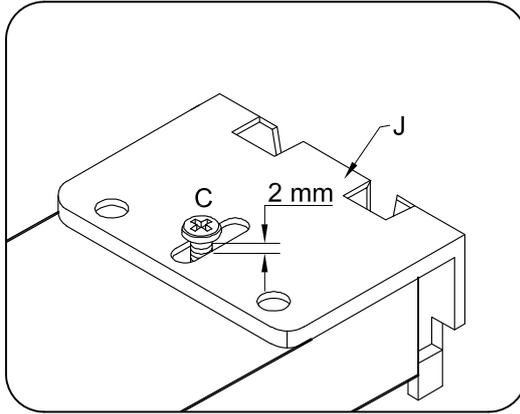


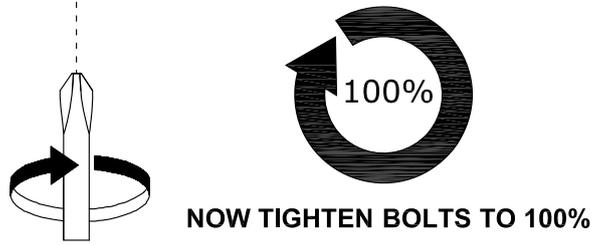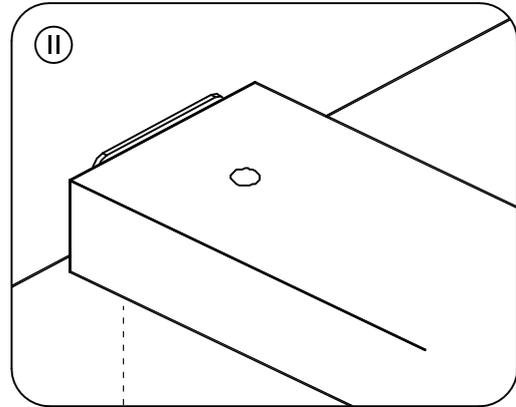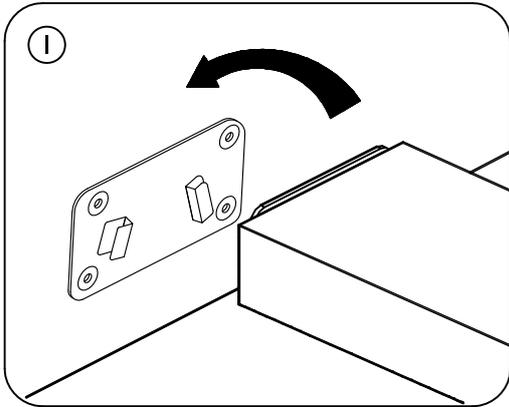


NOW TIGHTEN BOLTS TO 100%

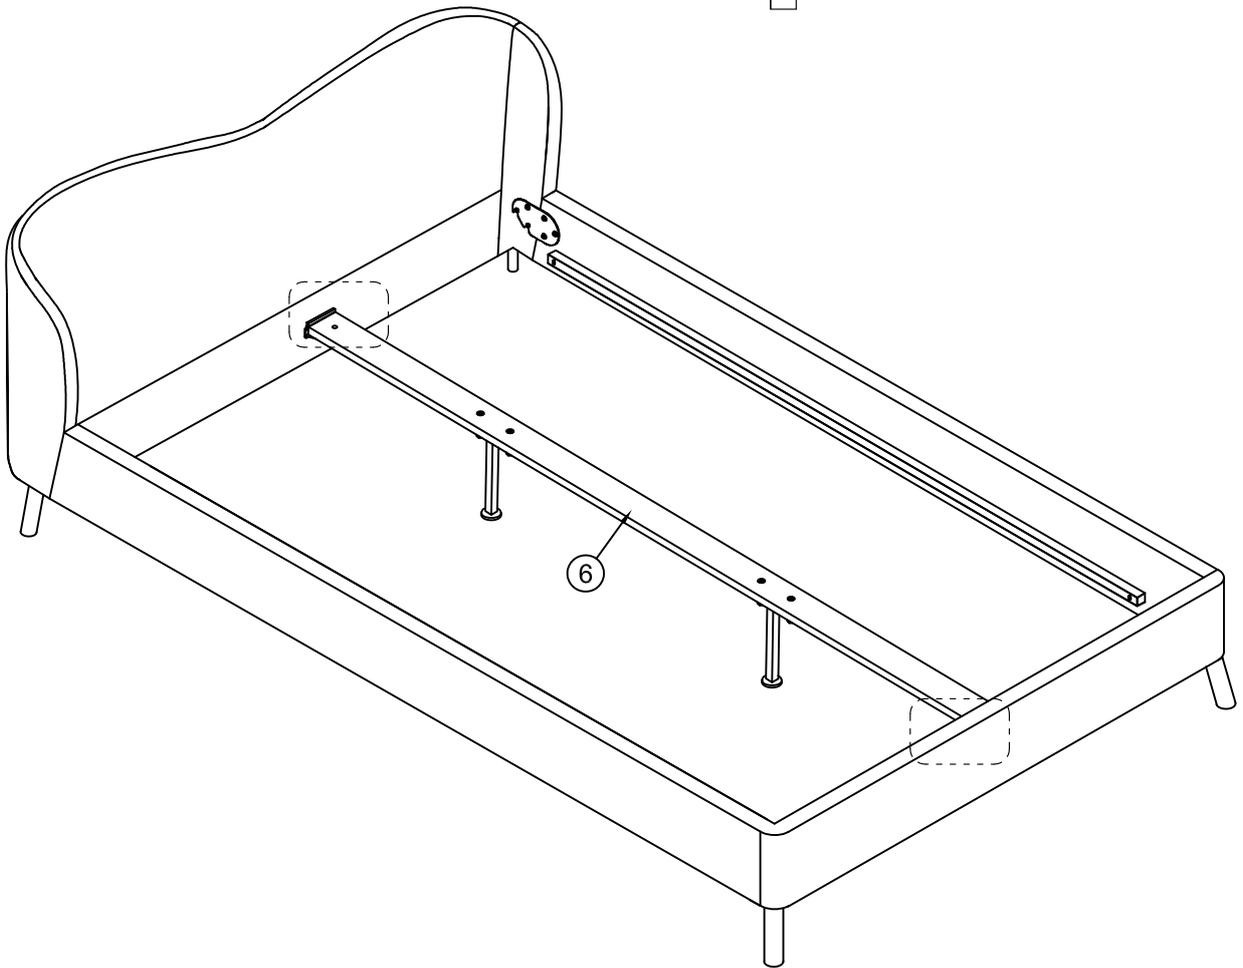


16

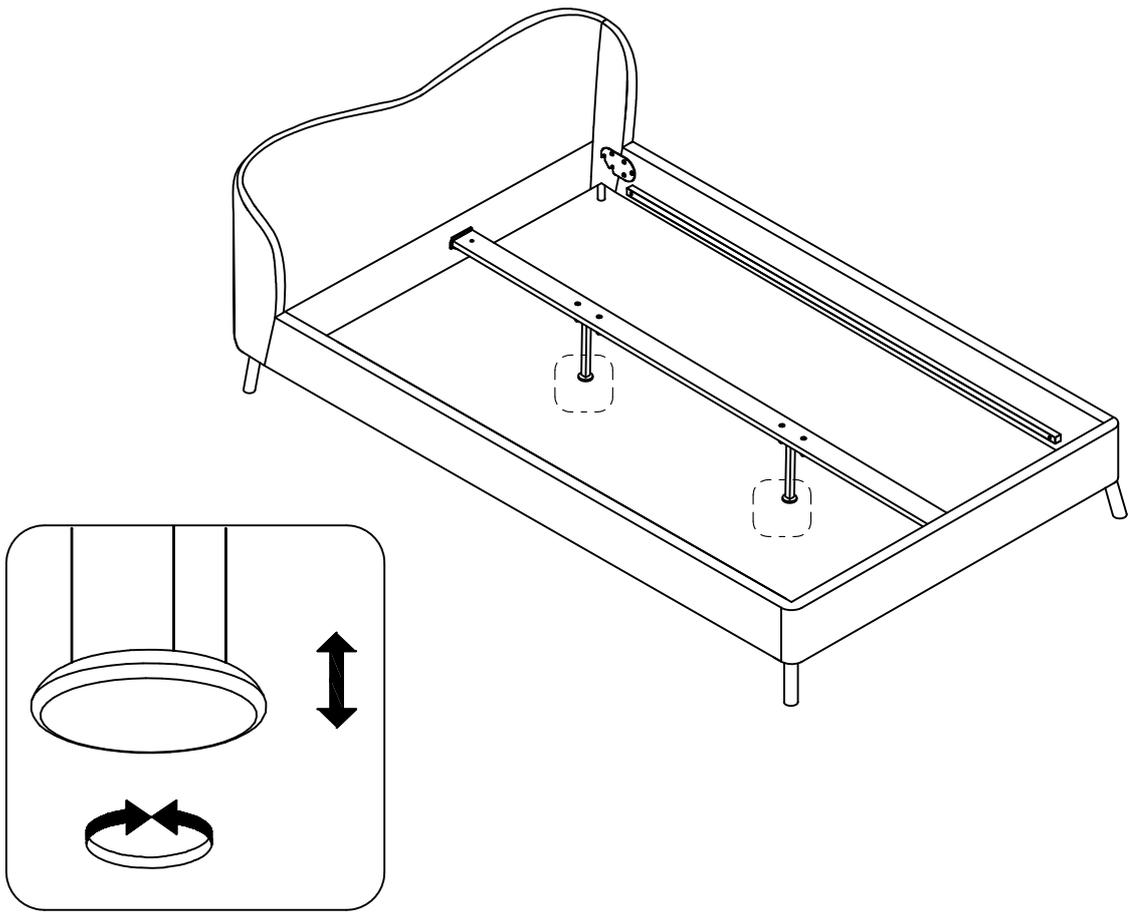

17

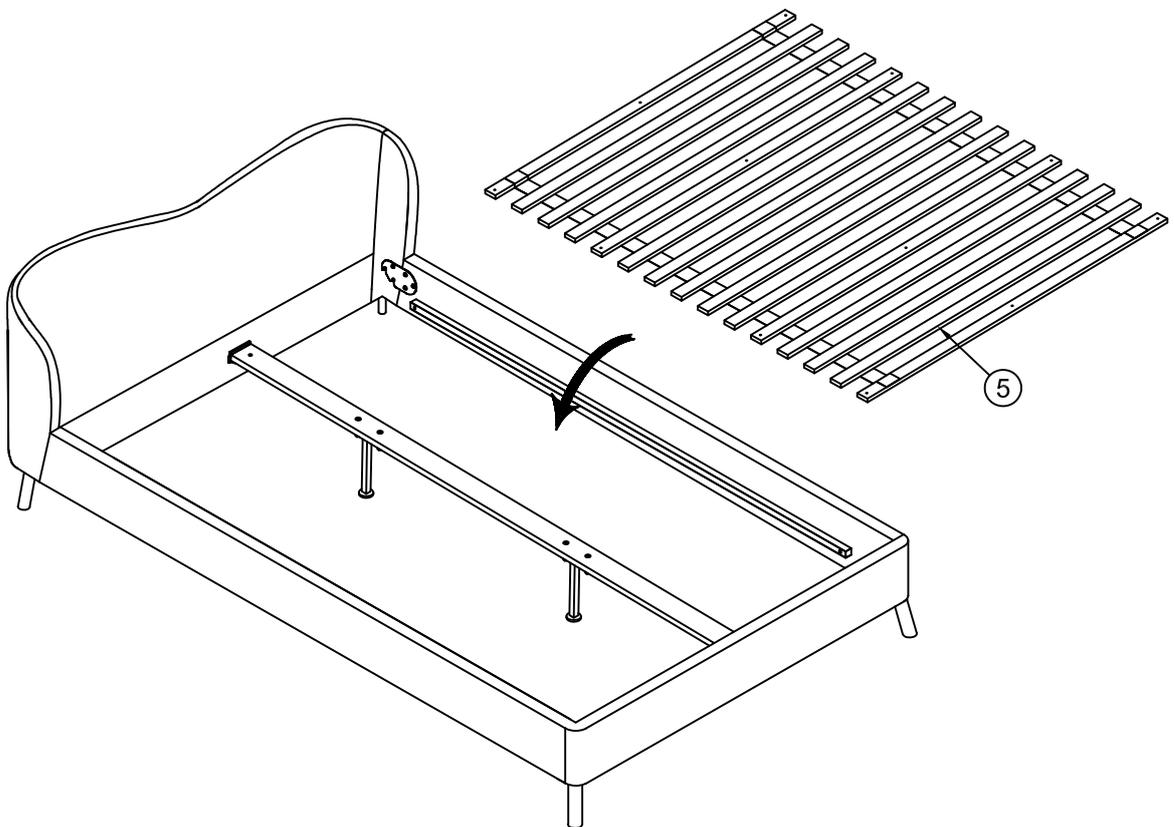

Dx12



Ø5x25mm

