
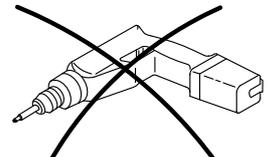
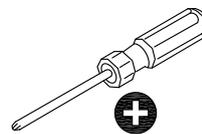
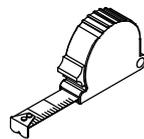
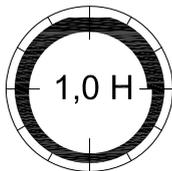
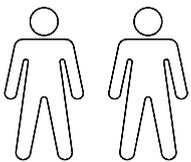


ASSEMBLY INSTRUCTIONS


JULIETTE SINGLE FULL BED

Please read instructions carefully. Remove all wrapping material and packing from the carton. See hardware and furniture parts list for guidance. Be sure you have all parts before you start to assemble the product. Place all furniture parts on a clean surface, such as carpet or rug to prevent the item from being scratched.

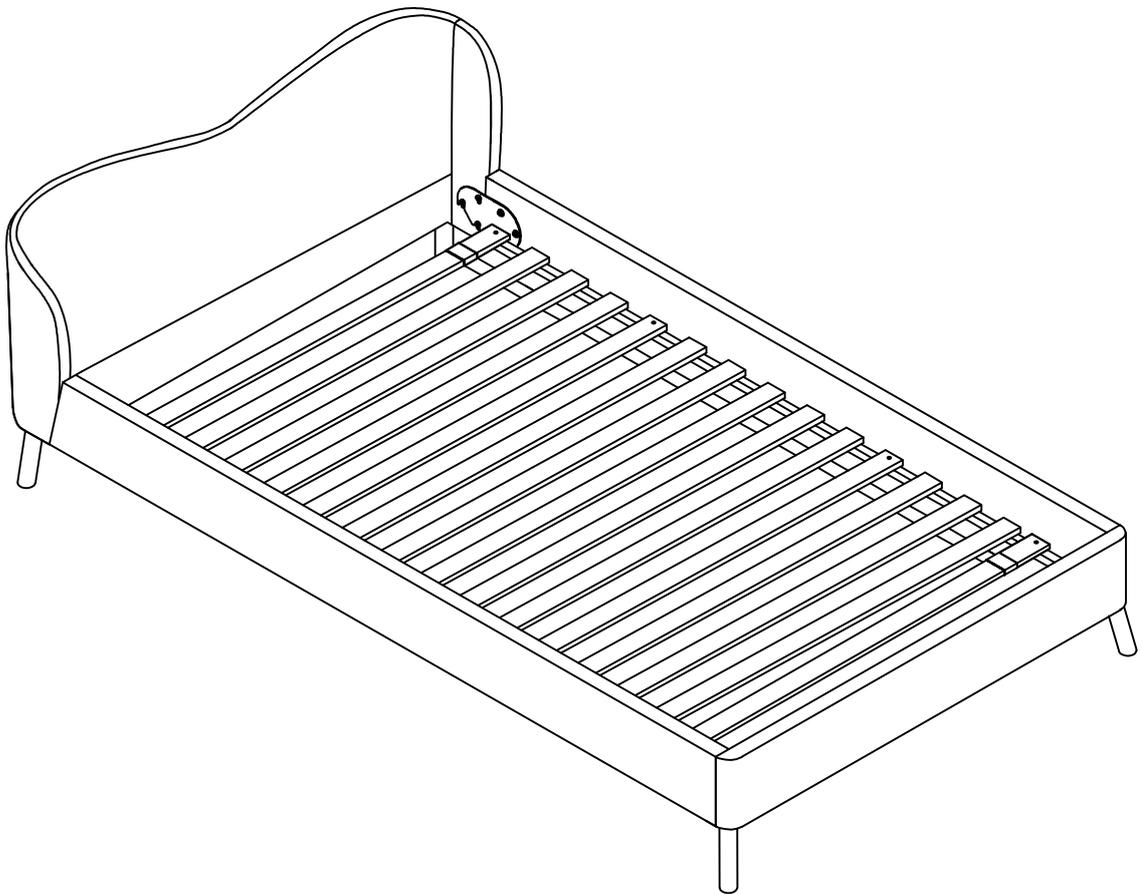

Part list:

1 x Part 1

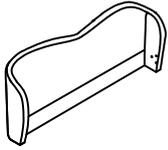

Headboard

1 x Part 2



Side rail left

1 x Part 3




Side rail right

1 x Part 4



Footboard

1 x Part 5

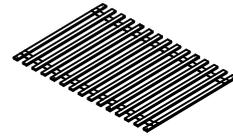

Slats

4 x Part 6



Leg


Hardware list:

Ax28



Bolt
M8x25

Bx20




Washer
Ø8/Ø19

Cx20



Spring washer
Ø8/Ø13

Dx1



Allen key
5mm

Ex2



Connecting plate
207x120x3

Fx4



Felt
Ø25x3

Gx2








Bracket
130x47x47


Hx8






Screw
Ø5x25


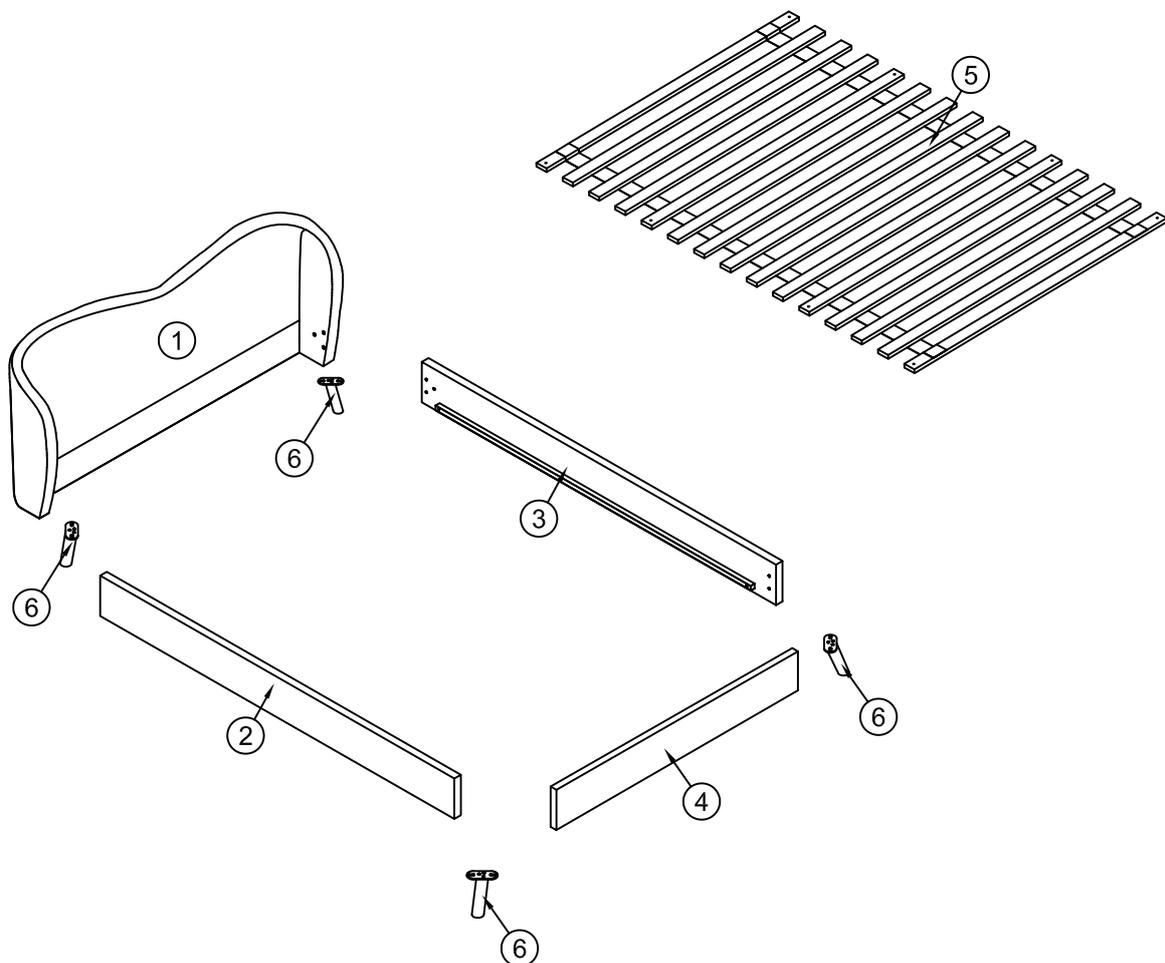


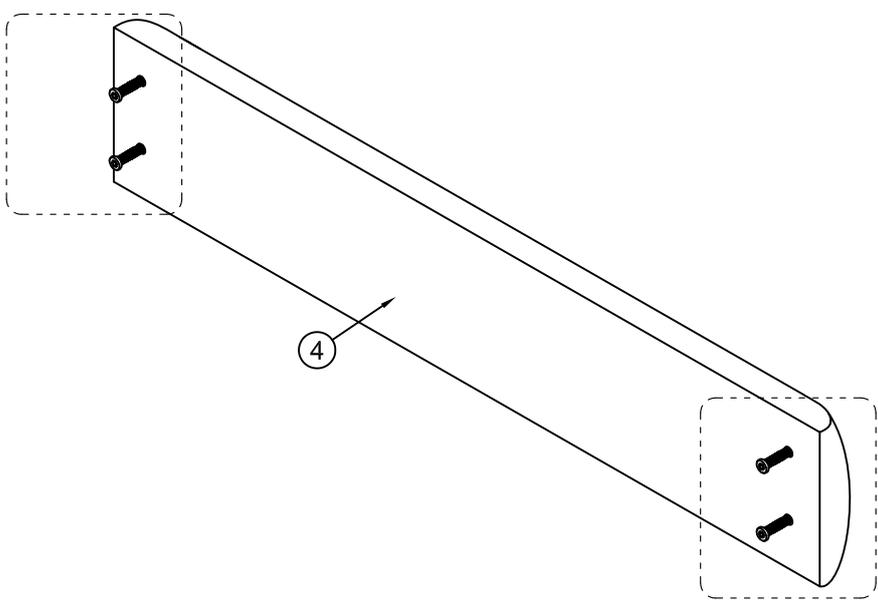
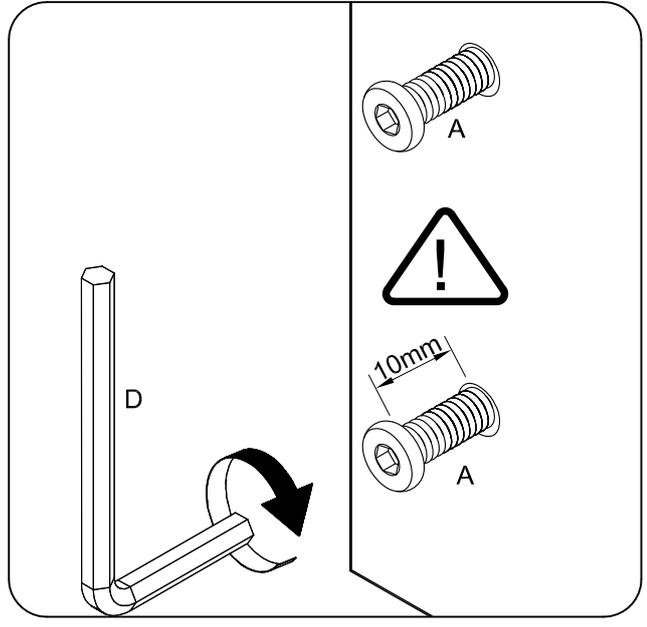
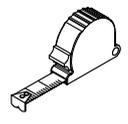
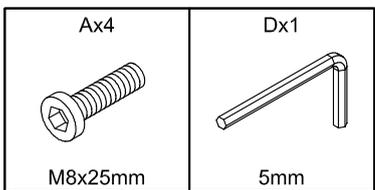




Ax6  M8x25mm	Bx6  Ø8/Ø19mm	Cx6  Ø8/Ø13mm	Dx1  5mm	Ex2  207x120x3mm
-----------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------

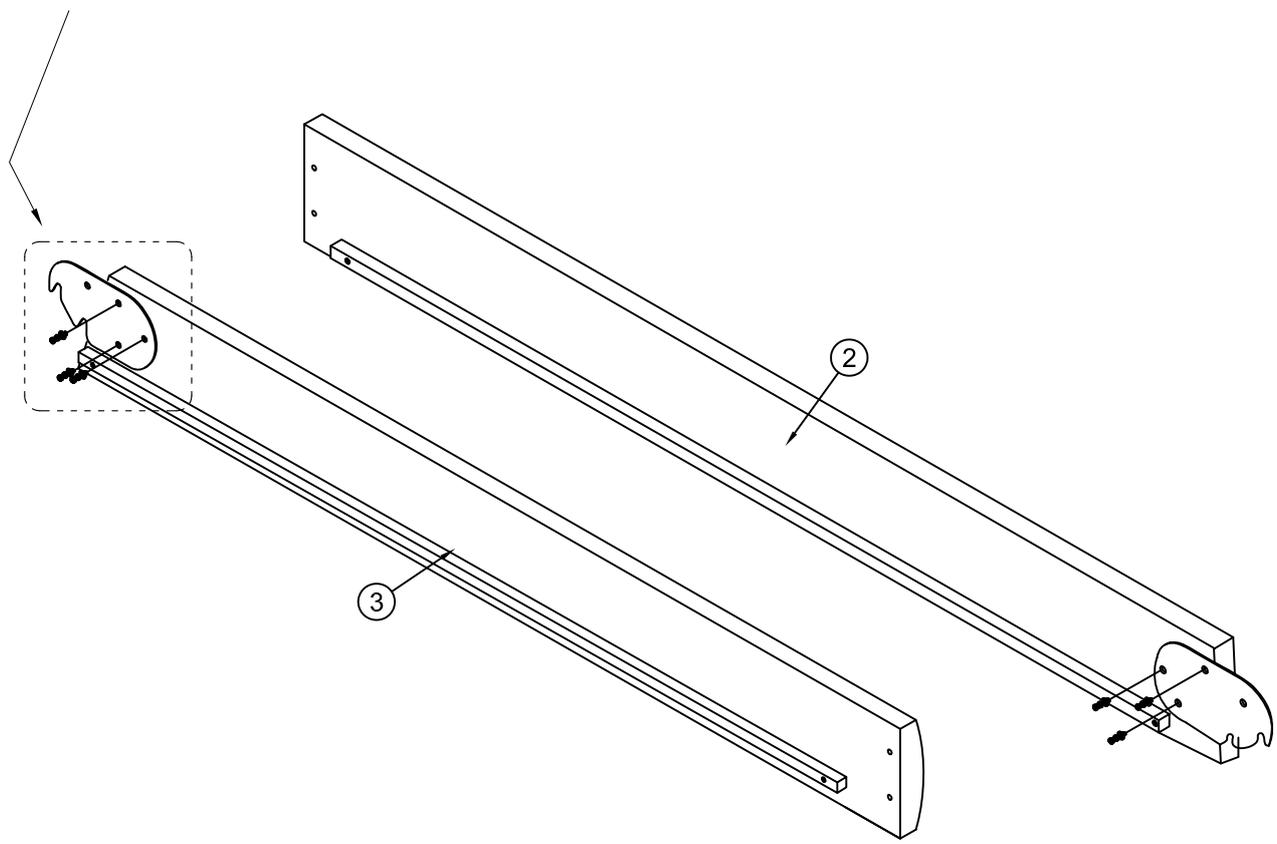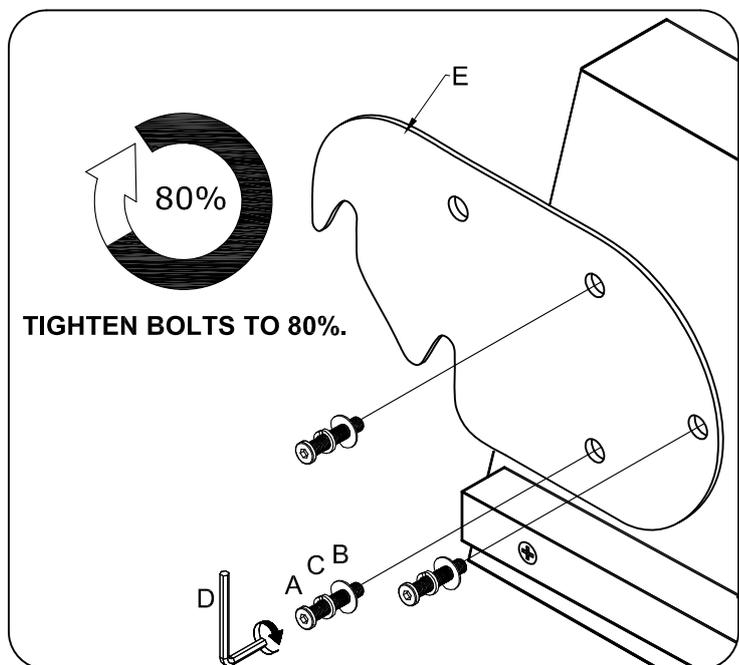




Ax4  M8x25mm	Bx4  Ø8/Ø19mm	Cx4  Ø8/Ø13mm	Dx1  5mm	Gx2  130x47x47mm
-----------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------


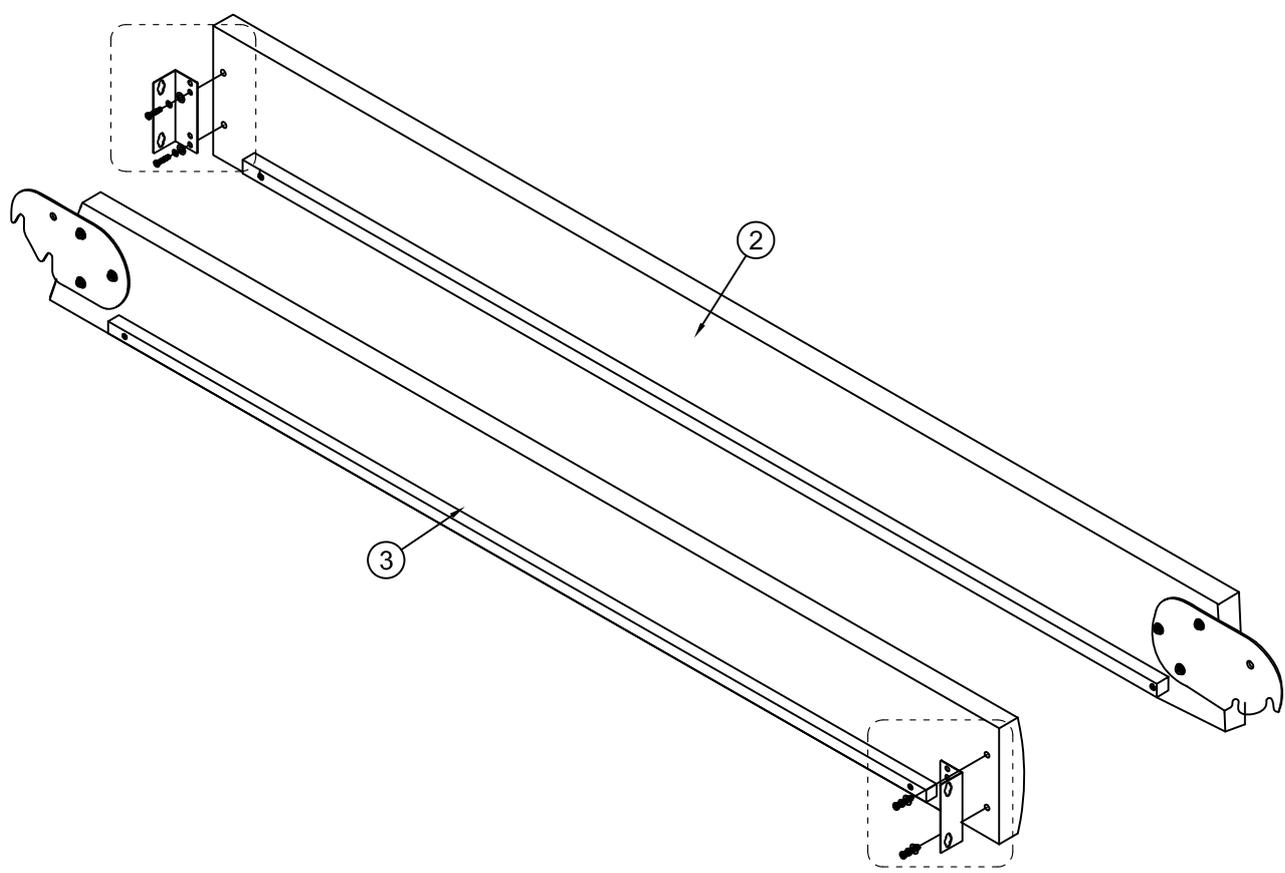
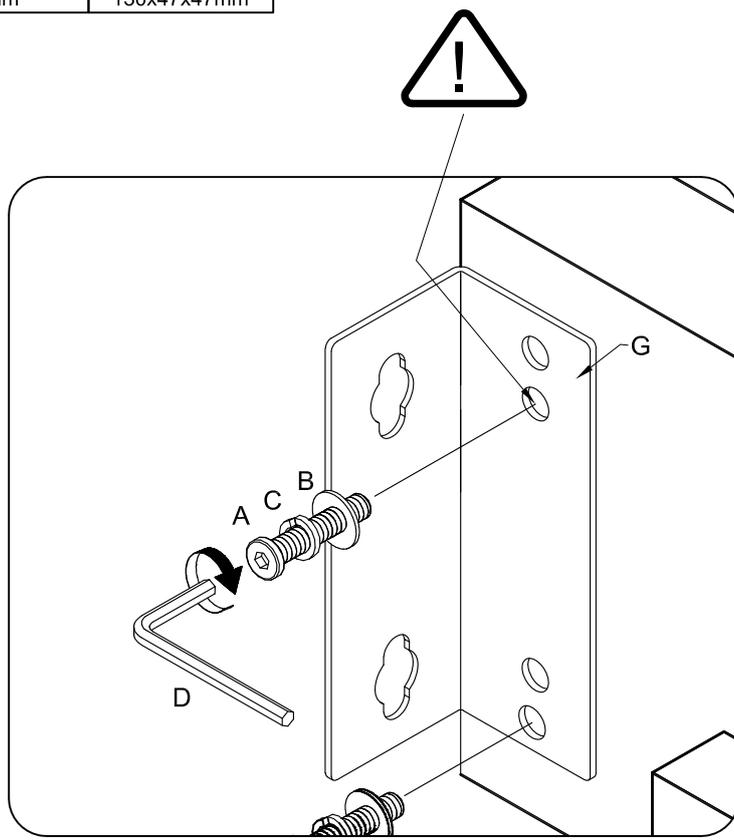


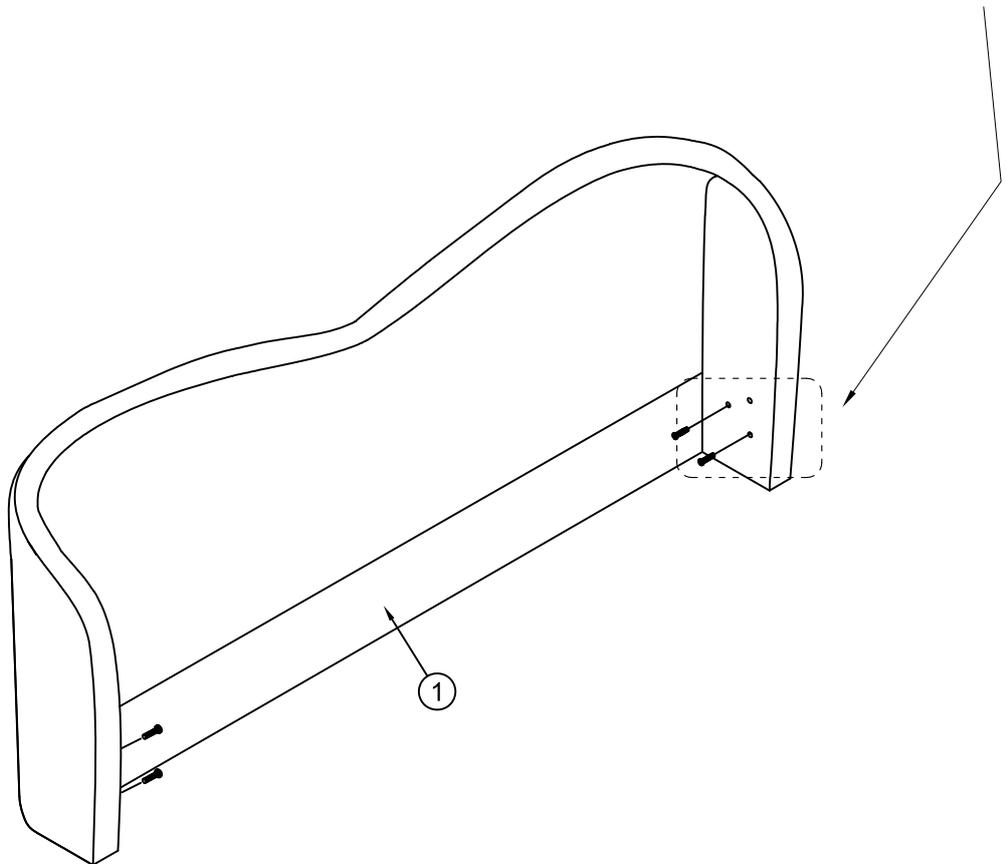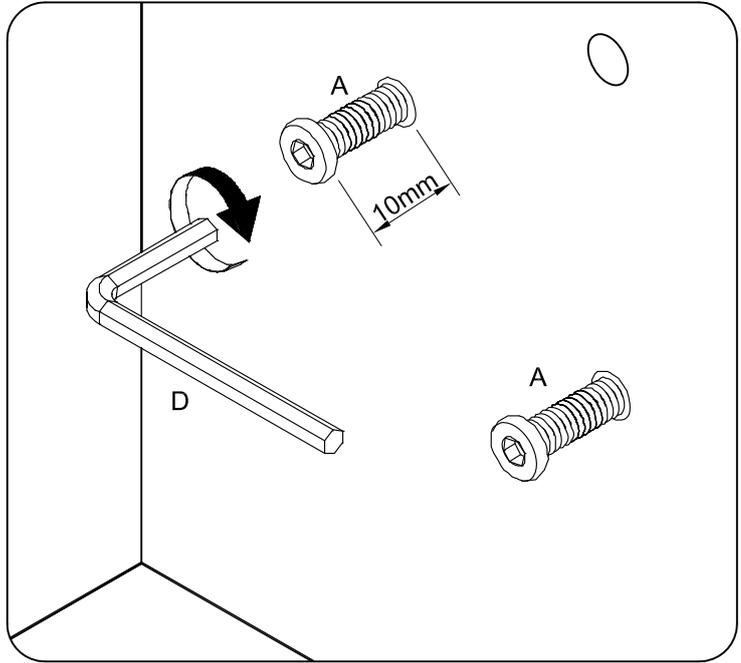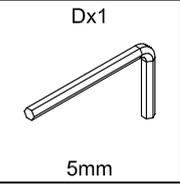

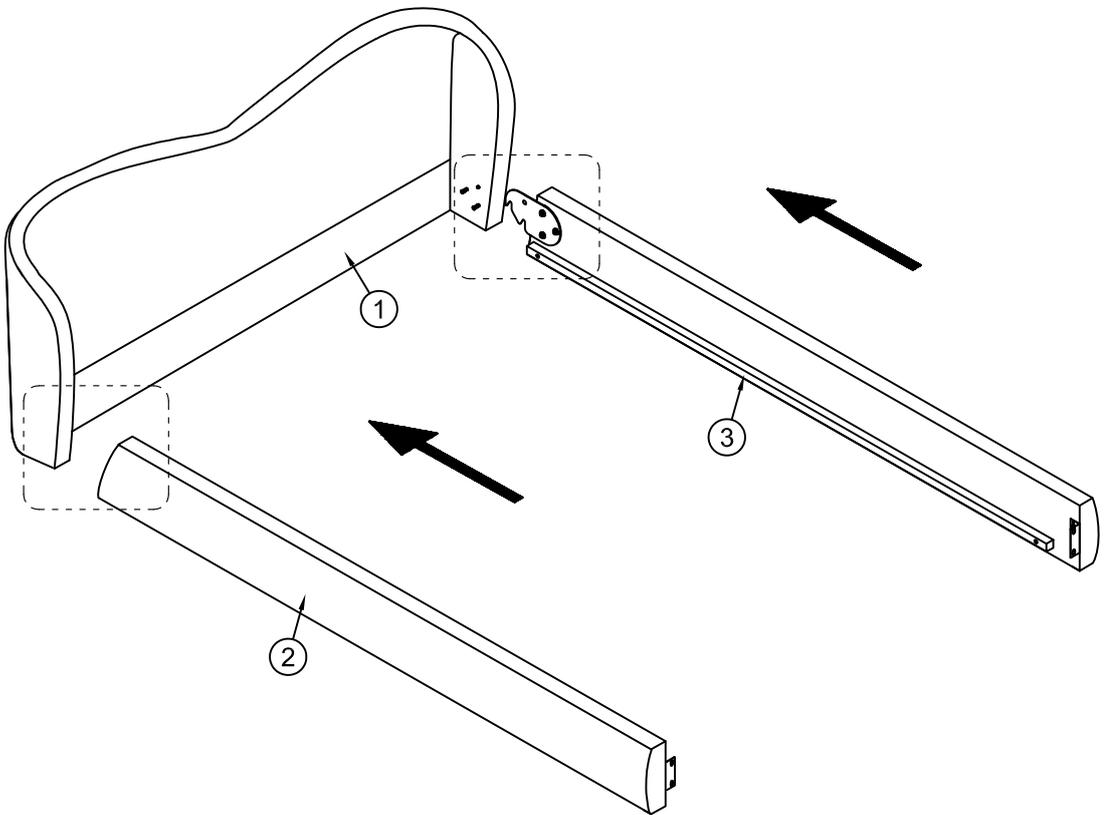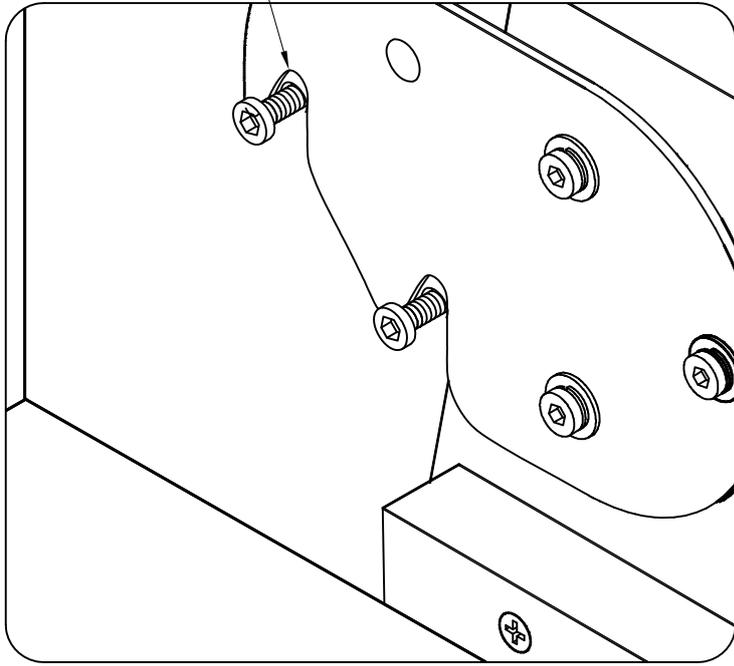

Ax2	Bx2	Cx2	Dx1
			
M8x25mm	Ø8/Ø19mm	Ø8/Ø13mm	5mm

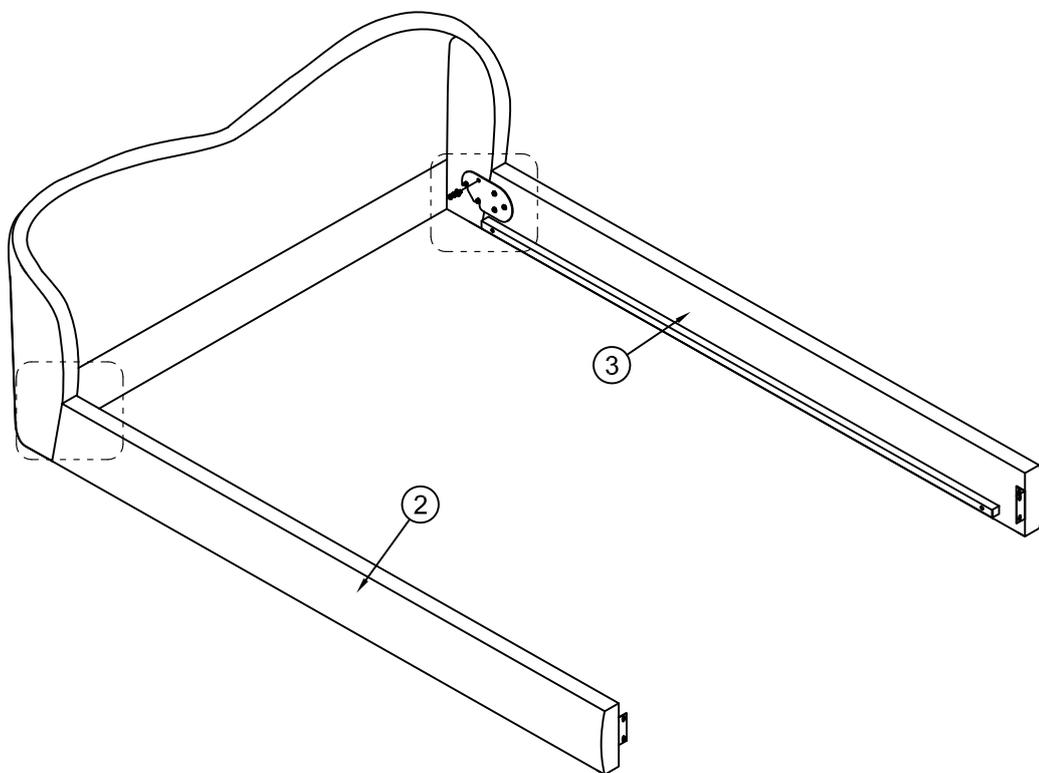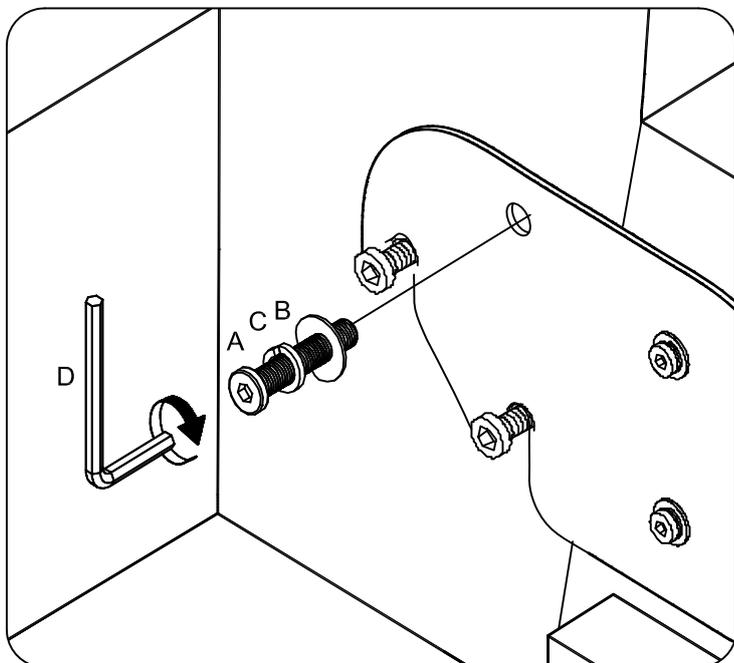


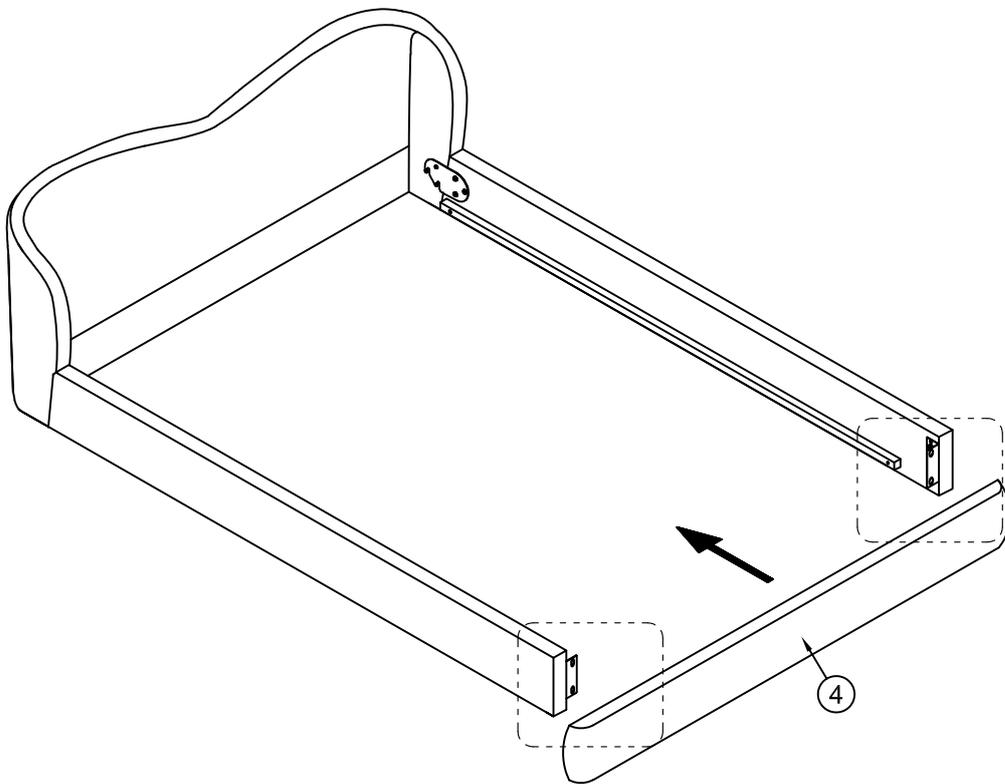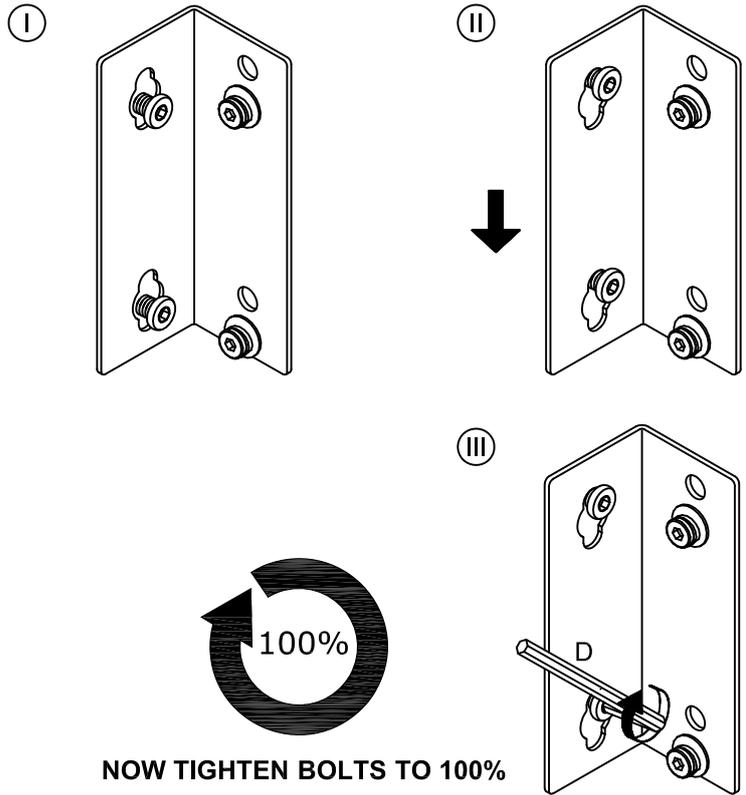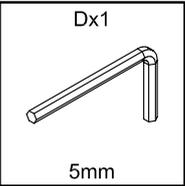



Dx1



5mm

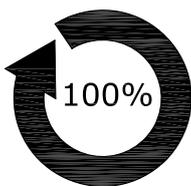



NOW TIGHTEN BOLTS TO 100%

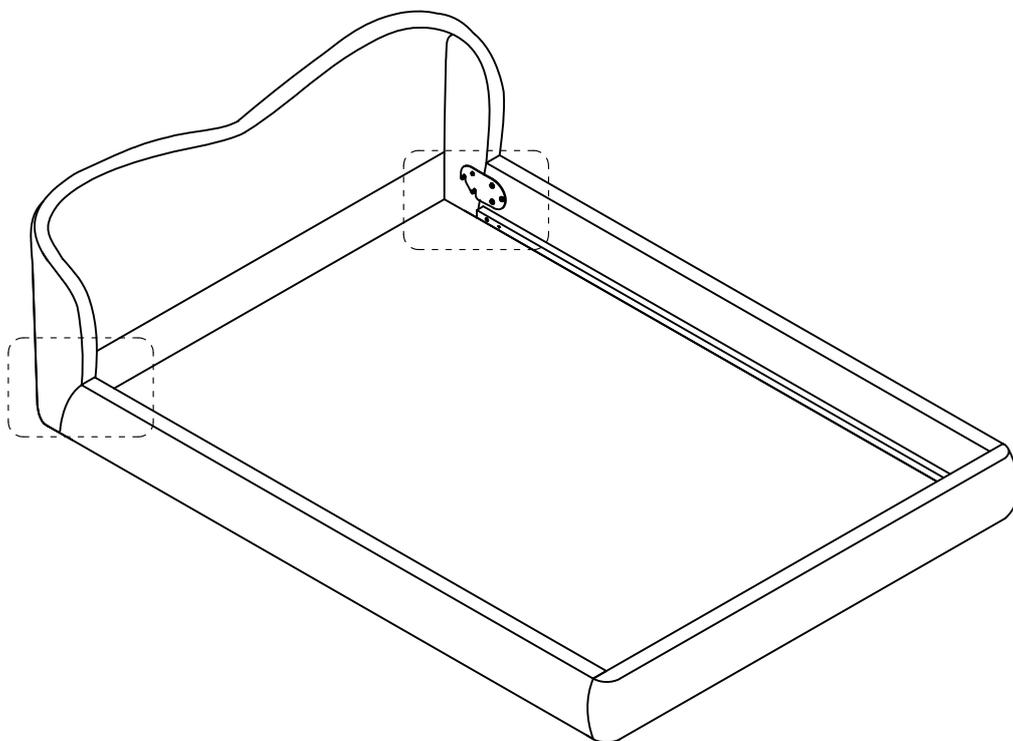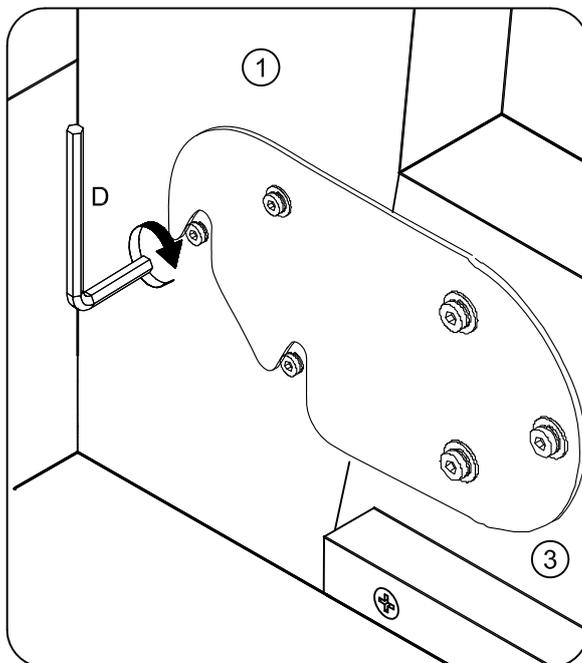


Fx4



Ø25x3mm

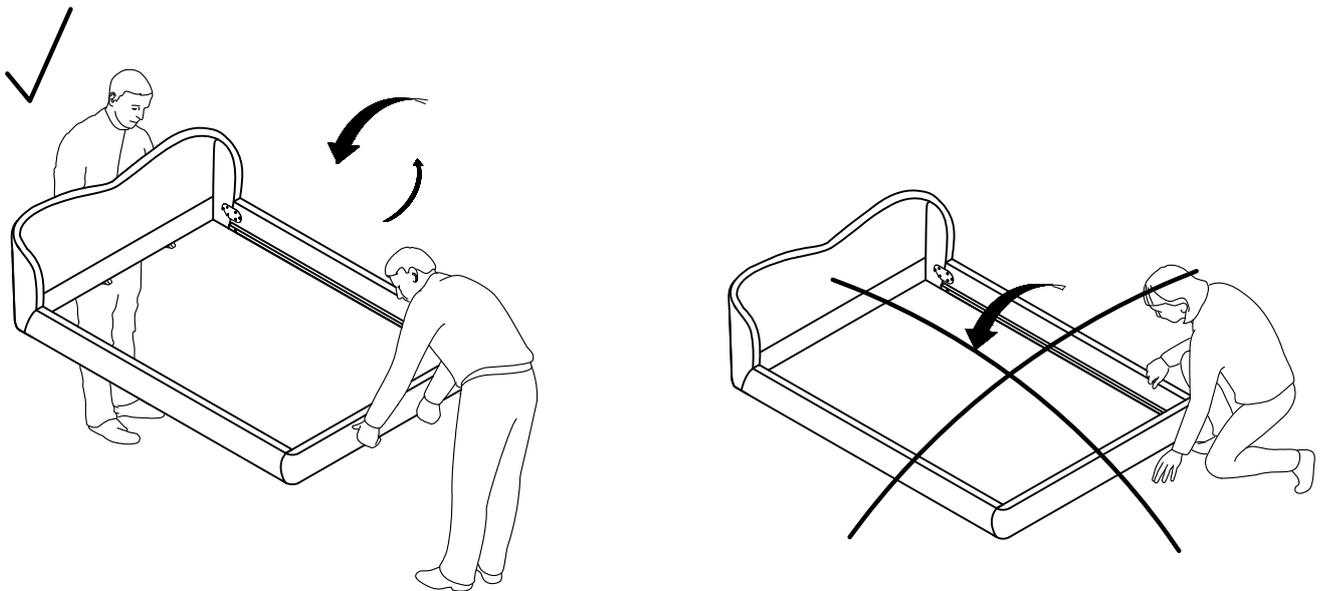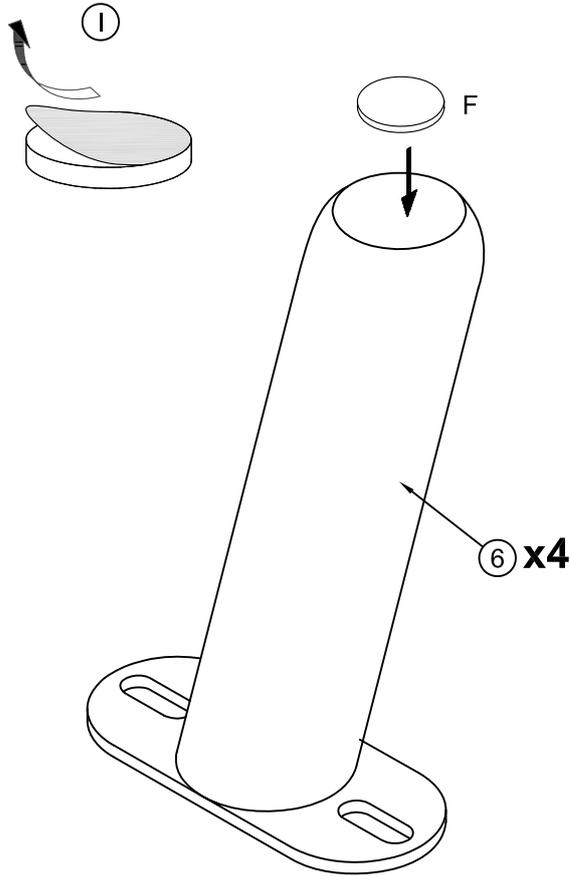

BEFORE TURNING BED, MAKE SURE THE SURFACE BELOW IS CLEAN AND FREE OF DUST. WE RECOMMEND USING TWO PEOPLE TO MOVE THE BED

Ax8  M8x25mm	Bx8  Ø8/Ø19mm	Cx8  Ø8/Ø13mm	Dx1  5mm
-----------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------

