
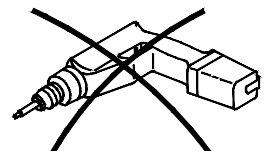
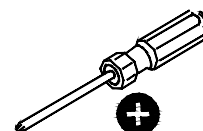
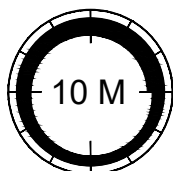


## ASSEMBLY INSTRUCTIONS

### SAVANNAH FURNITURE COLLECTION

### 1 DRAWER BEDSIDE TABLE

Please read instructions carefully. Remove all wrapping material and packing from the carton. See hardware and furniture parts list for guidance. Be sure you have all parts before you start to assemble the product. Place all furniture parts on a clean surface, such as carpet or rug to prevent the item from being scratched.

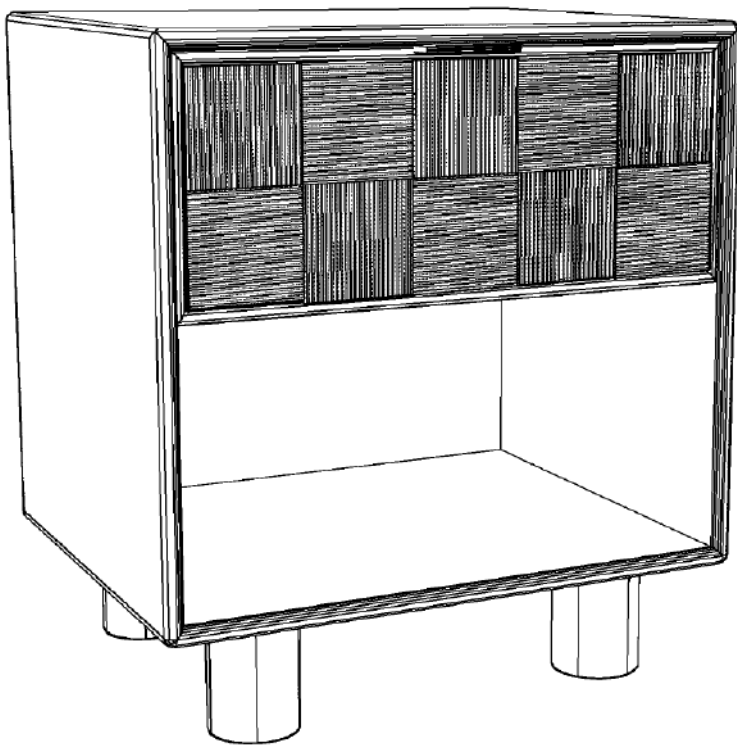


## Part list:

1 x Part 1



Cabinet

2 x Part 2

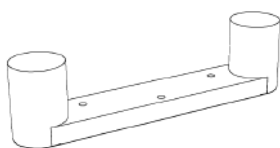

Leg

## Hardware list:

Ax6



Bolt  
M6X40

Bx6




Washer  
Ø8X20


Cx1



Allen key  
4mm

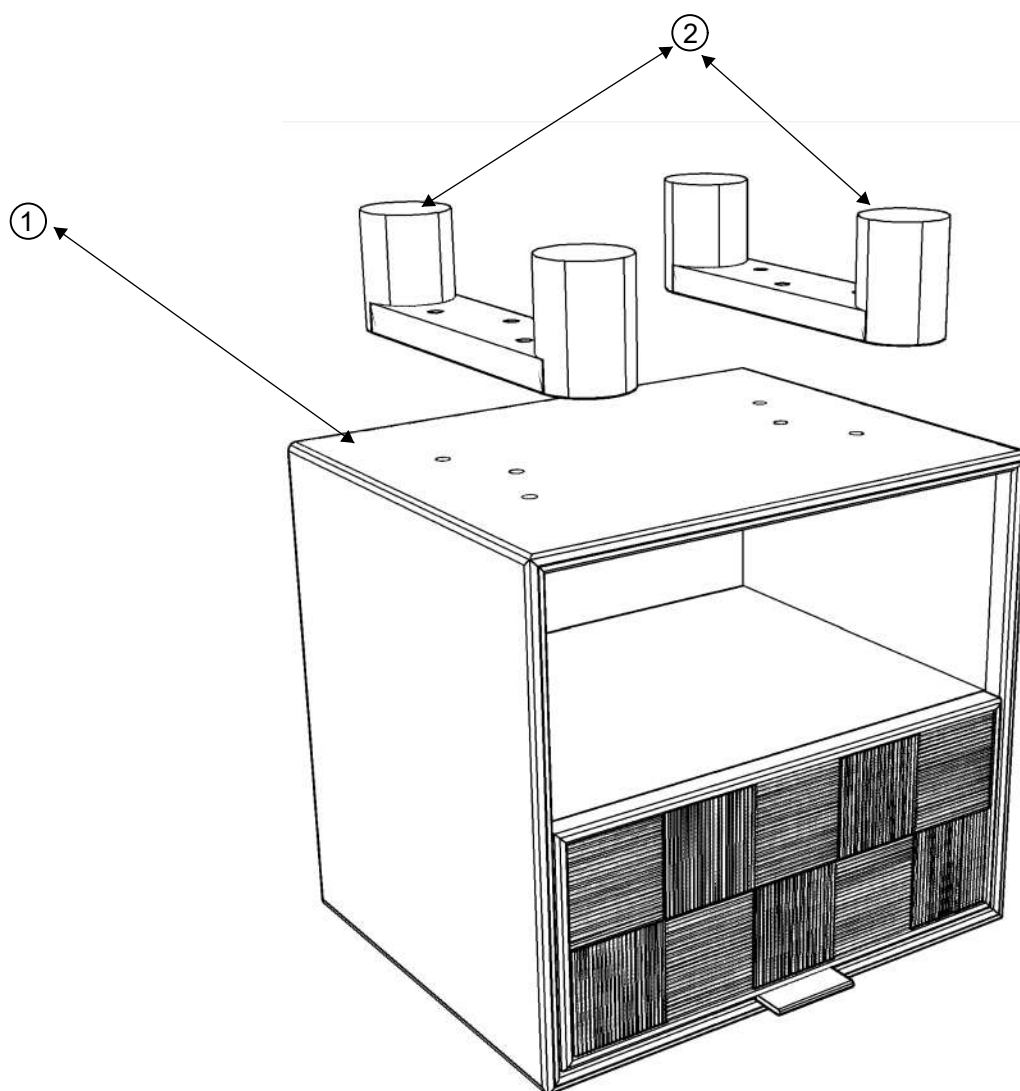

Ax6



M6x40mm

Bx6






Ø8X20

Cx1





4mm

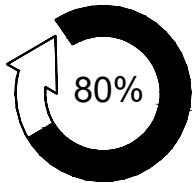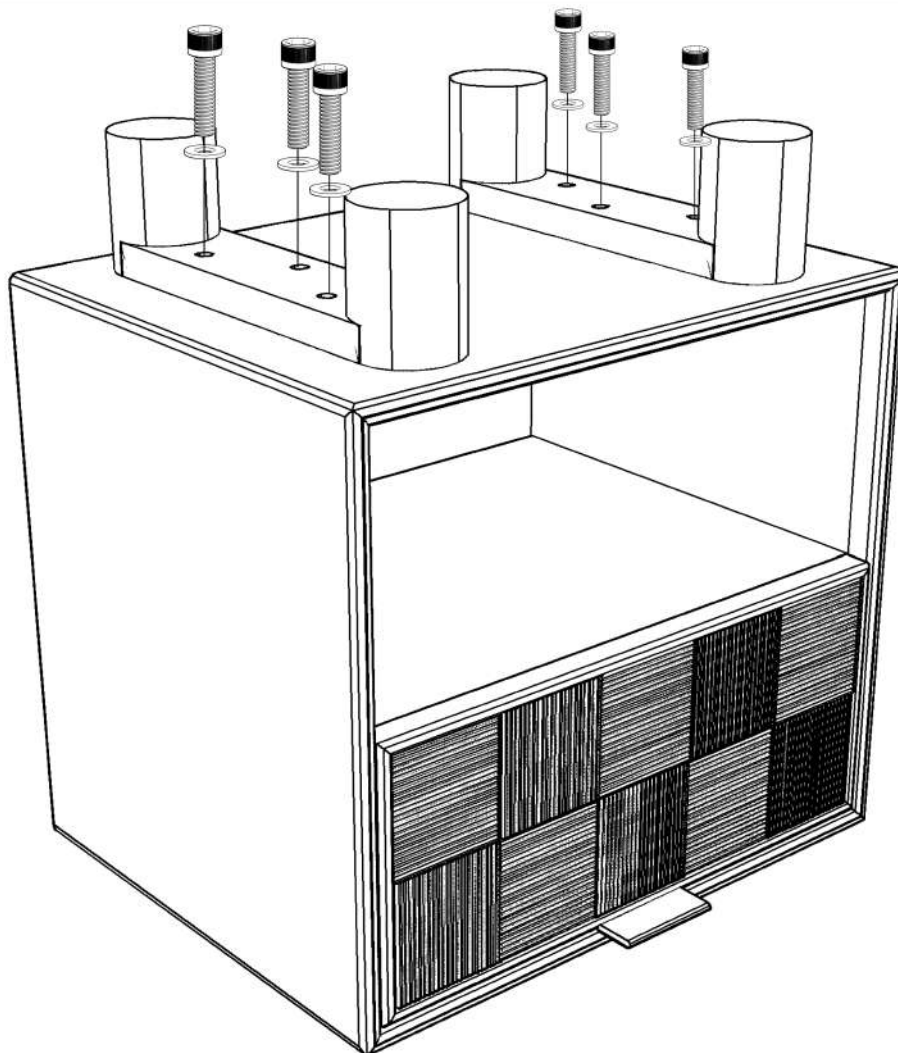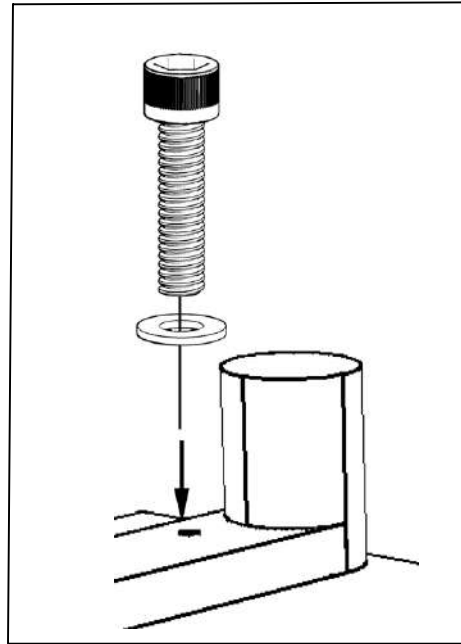**TIGHTEN BOLTS TO 80%.**

Cx1



4mm

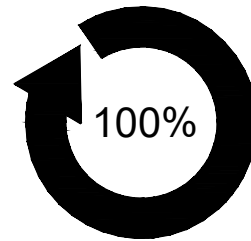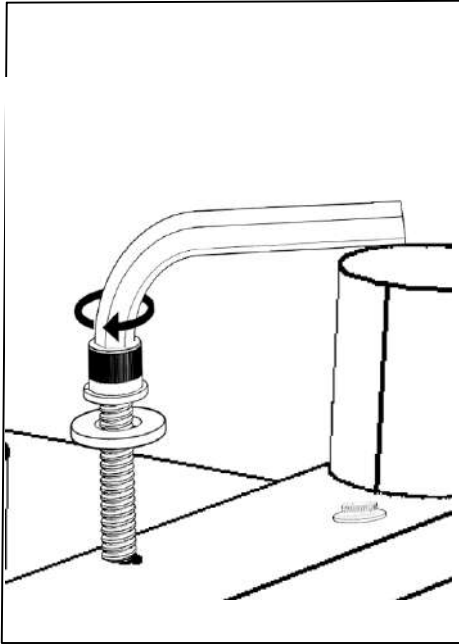

**NOW TIGHTEN BOLTS TO 100%.**

